



CHUNG TIEN

300U

Excellent Choice for High Speed,
Heavy Duty, Two Thread
Chainstitch Application!




CHUNG TIEN ENTERPRISE CO., LTD.

CONTENTS


1. MACHINE FRAME & MISCELLANEOUS COVER COMPONENTS.....	1
2. MAIN SHAFT NEEDLE FEED & NEEDLE BAR COMPONENTS.....	3, 5
3. DRIVING SHAFT COMPONENTS.....	7, 9
4. THROAT PLATE FEED MECHANISM COMPONENTS.....	11
5. PRESSER BAR & TENSION RELEASE COMPONENTS.....	13
6. LOOPER COMPONENTS.....	15
7. THREAD TENSION CONTROLLER COMPONENTS.....	17
8. 103A 194A MACHINE FRAME & MISCELLANEOUS COVER COMPONENTS.	19
9. 103A 194A MAIN SHAFT, NEEDLE FEED & NEEDLE BAR COMPONENTS....	21
10. 103A 194A PRESSER BAR & TENSION RELEASE COMPONENTS.....	23, 25
11. 194A PRESSER BAR & TENSION RELEASE COMPONENTS.....	27
12.NEEDLE GAUGE AND FITTING COMPONENTS.....	29
13. OIL PAN COMPLETE & GEAR PULLER COMPONENTS.....	30

1. MACHINE FRAME & MISCELLANEOUS COVER COMPONENTS

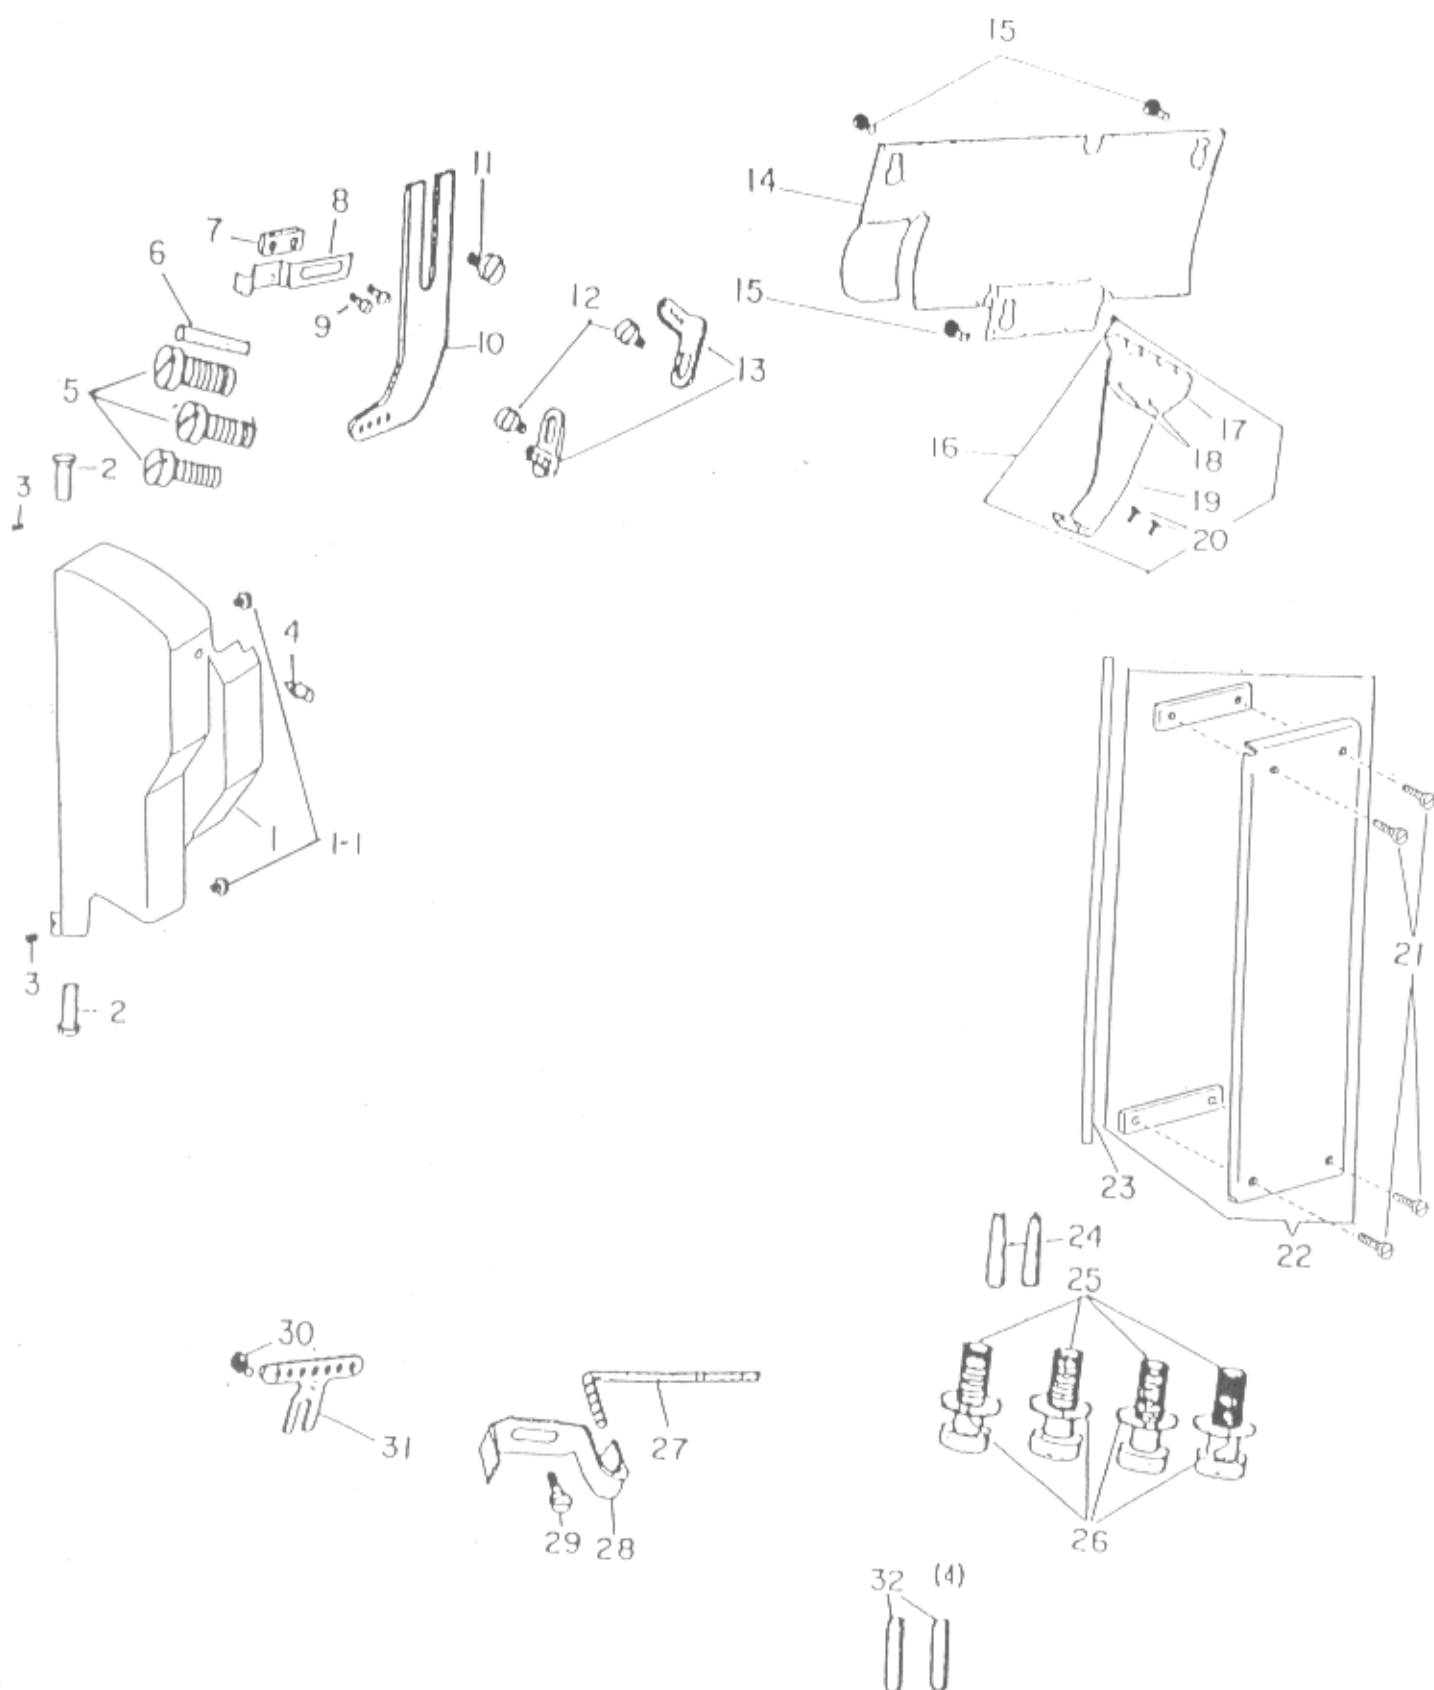


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 415012-451	FACE PLATE WITH 268033 AND TWO 545174-452	
1-1	CT 228661	FACE PLATE CUSHION (NEOPRENE) (2)	
2	CT 268330	FACE PLATE HINGE STUD (2)	
3	CT 545174-452	FACE PLATE HINGE STUD SET SCREW (2)	
4	CT 268033	FACE PLATE LOCK STUD	
5	CT 414504	ARM HEAD SCREW (3)	
6	CT 548005	ARM HEAD POSITION PIN	
7	CT 415016	FACE PLATE LOCK SPRING PLATE	
8	CT 268032	FACE PLATE LOCK SPRING	
9	CT 414534	PULLER FEED COVER PLATE (LEFT) SCREW (2)	
10	CT 268312	NEEDLE THREAD GUIDE (ON ARM HEAD)	
11	CT 414514	NEEDLE THREAD GUIDE SCREW	
12	CT 414514	NEEDLE THREAD GUIDE SCREW (2)	
13	CT 268513	NEEDLE THREAD GUIDE (ON SIDE OF ARM) (2)	
14	CT 268010-451	ARM SIDE COVER	
15	CT 545249-452	ARM SIDE COVER SCREW (3)	
16	CT 268506	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET 268111 WITH 268505 AND TWO 50169(809)	
17	CT 268505	LOOPER THREAD GUIDE (TOP OF ARM)	
18	CT 50169(809)	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)	
19	CT 268111	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET	
20	CT 414537	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)	
21	CT 414639	LOOPER THREAD TUBE CLAMP SCREW (4)	
22	CT 415342	LOOPER THREAD TUBE COVER	
23	CT 268123	LOOPER THREAD TUBE	
24	CT 415295	ARM POSITION PIN (2)	
25	CT 415361	ARM SCREW (4)	
26	CT 543804-007	ARM SCREW WASHER (4)	
27	CT 268052	LOOPER THREAD TAKE-UP ROD	
28	CT 268051	LOOPER THREAD GUIDE	
29	CT 414510	LOOPER THREAD GUIDE SCREW	
30	CT 414556	LOOPER THREAD GUIDE (ON BED AT LOOPER) SCREW	
31	CT 268373	LOOPER THREAD GUIDE (ON BED AT LOOPER) FOR ALL GAUGES FROM 3/16 TO 2 INCHES	
32	CT 228448(4)	MACHINE LOCATION STUD (4)	

2. MAIN SHAFT NEEDLE FEED & NEEDLE BAR COMPONENTS

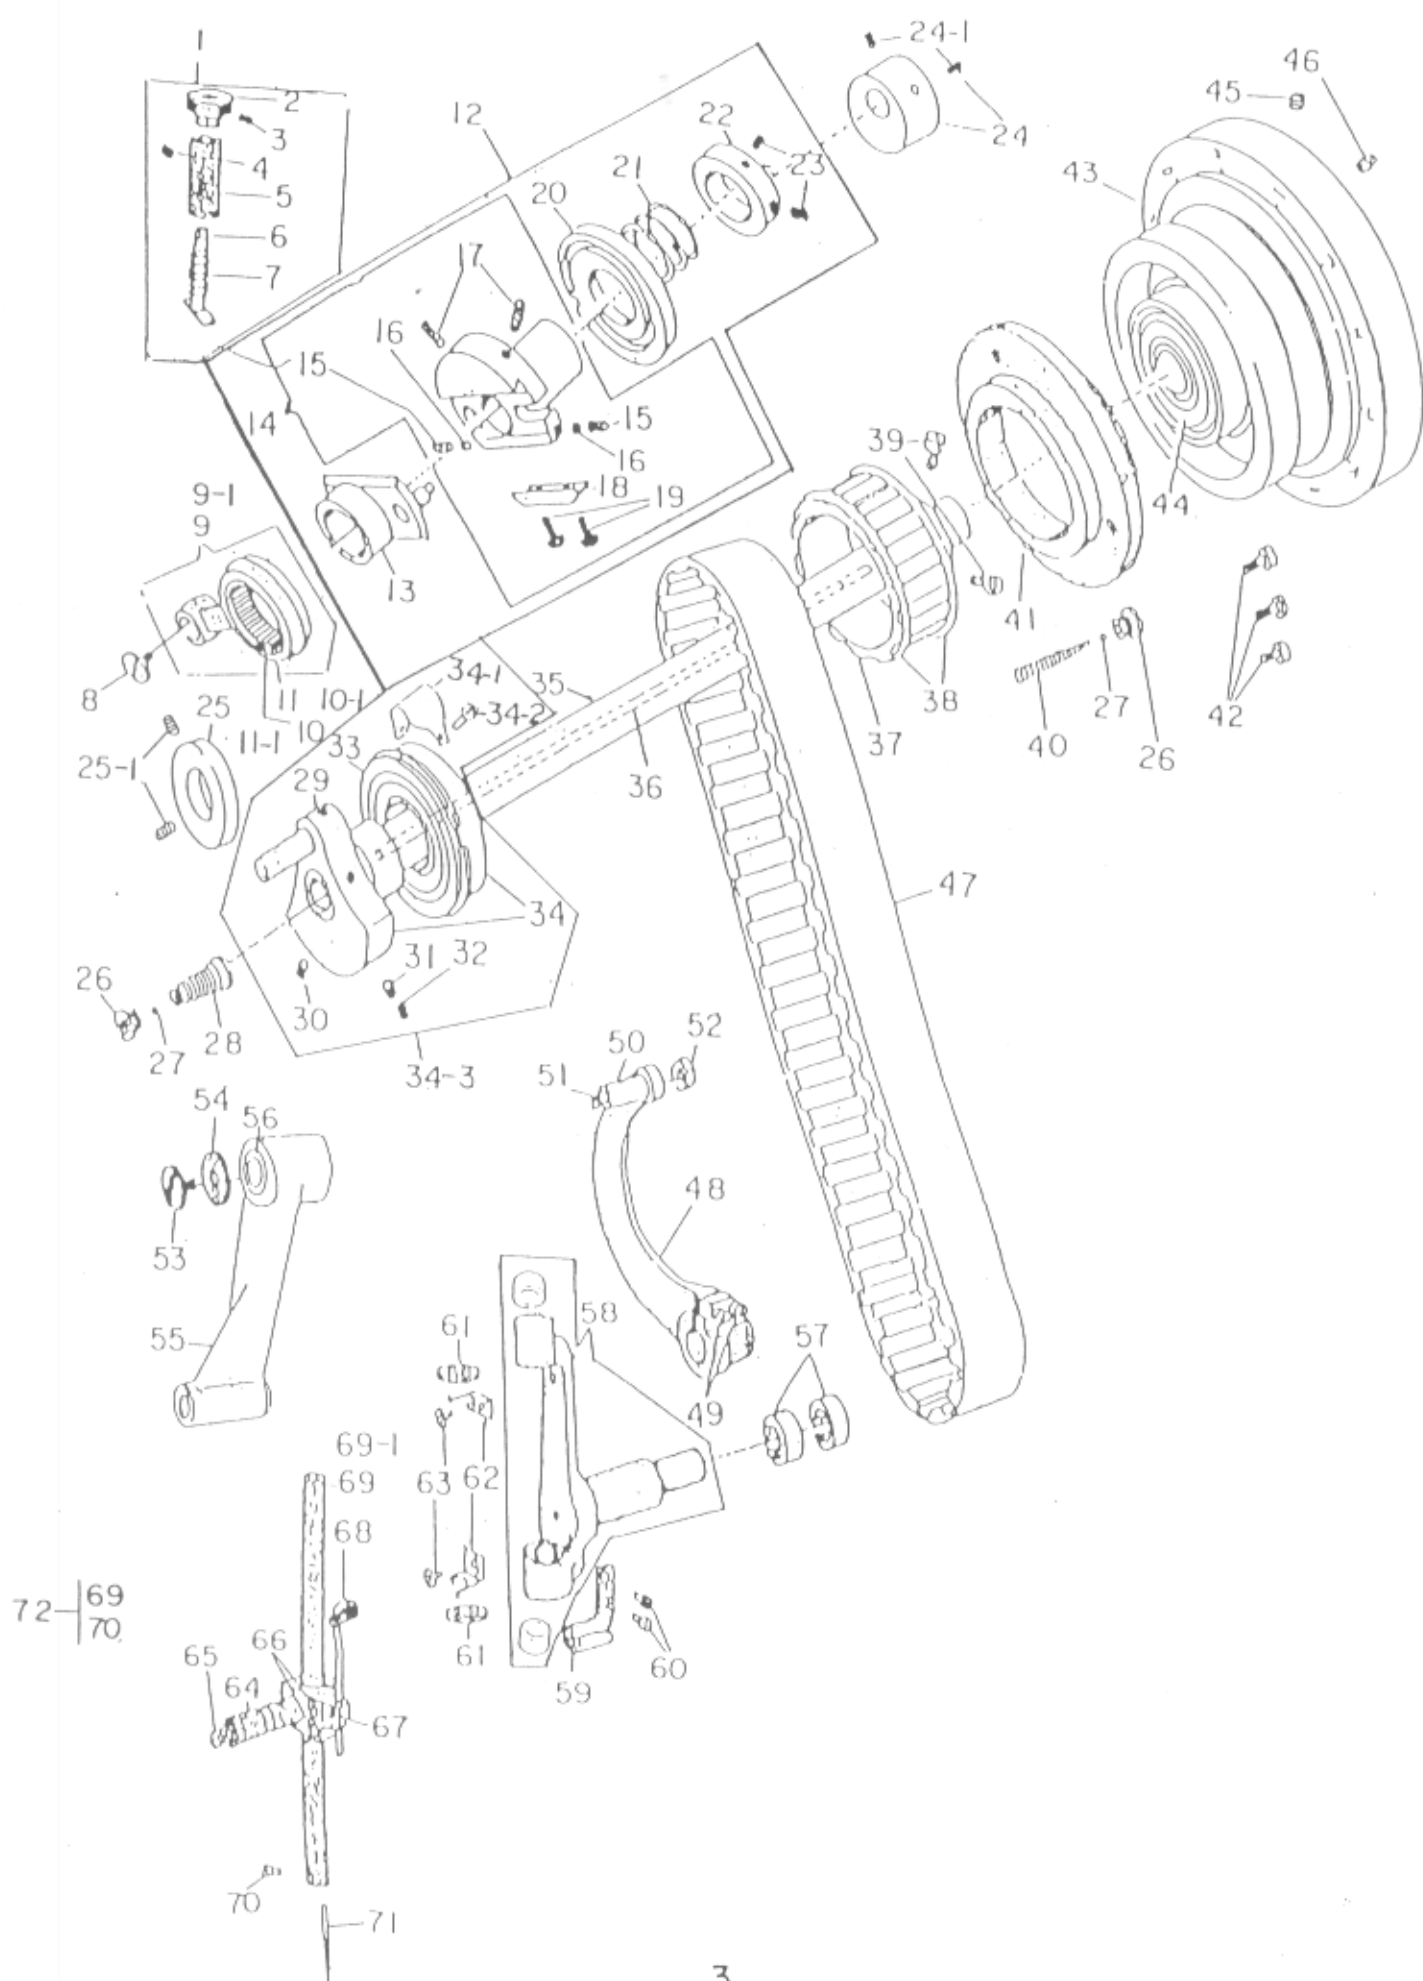


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 415098	NEEDLE BAR ROCK FRAME REGULATING STUD COMPLETE	
2	CT 415099	NEEDLE BAR ROCK FRAME REGULATING STUD CAP W/ 200364(803)	
3	CT 414528	NEEDLE BAR ROCK FRAME REGULATING STUD CAP SET SCREW	
4	CT 414527	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE SET SCREW	
5	CT 268149	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE	
6	CT 268148	NEEDLE BAR ROCK FRAME REGULATING STUD	
7	CT 214529	NEEDLE BAR ROCK FRAME REGULATING STUD SPRING	
8	CT 545297	NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW	
9	CT 268061M	NEEDLE BAR ROCK FRAME DRIVING CONNECTION	
9-1	CT 267609M	NEEDLE BAR ROCK FRAME DRIVING CONNECTION OF 103/194	
10	CT 268063M	NEEDLE BAR ROCK FRAME DRIVING CONNECTION NEEDLE BEARING	
10-1	CT 271055M	NEEDLE BAR ROCK FRAME DRIVING CONNECTION NEEDLE BEARING OF 194	
11	CT 268060	NEEDLE BAR ROCK FRAME DRIVING CONNECTION	
11-1	CT 267608	NEEDLE BAR ROCK FRAME DRIVING CONNECTION OF 194	
12	CT 415072	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE	
13	CT 268064	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC	
14	CT 415073	NEEDLE BAR ROCK FRAME DRIVING FLANGE	
15	CT 414557	NEEDLE BAR FRAME DRIVING ECCENTRIC FRICTION PLATE SET SCREW (2)	
16	CT 241763	NEEDLE BAR FRAME DRIVING ECCENTRIC FRICTION PLATE SET SCREW PACKING (BRASS) (2)	
17	CT 414555	NEEDLE BAR ROCK FRAME DRIVING FLANGE SET SCREW (2)	
18	CT 267623	LIFTING ECCENTRIC FRICTION PLATE	
19	CT 374098	NEEDLE BAR FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW (2)	
20	CT 268065	NEEDLE BAR FRAME DRIVING ECCENTRIC ADJUSTING DISC	
21	CT 268066	NEEDLE BAR FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING	
22	CT 412011	NEEDLE BAR FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR	
23	CT 544325	NEEDLE FRAME DRIVING ECCENTRIC ADJUSTING COLLAR SET SCREW (2)	
24	CT 281256	COUNTERBALANCE W/TWO 544208-005 SET SCREW (2)	
24-1	CT 544208-005	COUNTERBALANCE W/TWO 544208-005 SET SCREW (2)	
25	CT 415308	LIFTING ECCENTRIC COLLAR	
25-1	CT 414529	LIFTING ECCENTRIC COLLAR SET SCREW (2)	
26	CT 414578	ARM SHAFT OIL STOP BALL SCREW	
27	CT 268214	ARM SHAFT OIL STOP BALL 5/32 IN. DIA. (2)	
28	CT 268009	ARM SHAFT OIL STOP BALL SPRING (FRONT)	
29	CT 415133	NEEDLE BAR CRANK	
30	CT 500272-833	NEEDLE BAR CRANK SET SCREW	
31	CT 549024	NEEDLE BAR CRANK POSITION SCREW	
32	CT 544358	NEEDLE BAR CRANK POSITION SCREW	
33	CT 32848	ARM SHAFT BALL BEARING (FRONT)	
34	CT 415132	NEEDLE BAR CRANK W/CT 32848	
34-1	CT 281206	NEEDLE BAR CRANK COVER	
34-2	CT 545205-451	NEEDLE BAR CRANK COVER SCREW (2)	
34-3	CT 281209	NEEDLE BAR CRANK W/CT 32848, CT 281206 AND TWO CT 545205-451	
35	CT 415126	ARM SHAFT	
36	CT 268264	ARM SHAFT OIL CONTROL ROD (WOOD)	
37	CT 415157	ARM SHAFT CONNECTION BELT PULLEY W/TWO EACH	
38	CT 202253	ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE (2)	
39	CT 414546	ARM SHAFT CONNECTION BELT PULLEY SET SCREW (2)	
40	CT 268044	ARM SHAFT OIL STOP BALL SPRING (REAR)	
41	CT 268004-451	ARM SHAFT BALL BEARING (BACK) HOUSING	
42	CT 544336	ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)	
43	CT 415153-451	MACHINE PULLEY FOR "V" BELT (OUTSIDE DIA. OF BELT GROOVE 2.9 IN.)	
44	CT 272142	ARM SHAFT BALL BEARING	
45	CT 414525	MACHINE PULLEY SET SCREW	
46	CT 414526	MACHINE PULLEY POSITION SCREW	
47	CT 268270	ARM SHAFT CONNECTION BELT	
48	CT 415089-451	NEEDLE BAR ROCK FRAME DRIVING ARM W/TWO	
49	CT 414509	NEEDLE BAR ROCK FRAME DRIVING AMR PINCH SCREW (2)	
50	CT 415091	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD	
51	CT 265258	NEEDLE BAR ROCK FRAME HINGE STUD OIL PACKING (WICK)	
52	CT 541197	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT	
53	CT 414517	NEEDLE BAR CONNECTION LINK CAP WASHER SCREW	
54	CT 268139	NEEDLE BAR CONNECTION LINK CAP WASHER	
55	CT 281217	NEEDLE BAR CONNECTION LINK	
56	CT 270266M	NEEDLE BAR CONNECTION LINK BEARING (2)	
57	CT 268029M	NEEDLE BAR ROCK FRAME BEARING (2)	
58	CT 415393	NEEDLE BAR ROCK FRAME	
59	CT 268219	NEEDLE BAR ROCK FRAME THREAD GUIDE	
60	CT 414539	NEEDLE BAR ROCK FRAME THREAD GUIDE SCREW (2)	

2. MAIN SHAFT NEEDLE FEED & NEEDLE BAR COMPONENTS

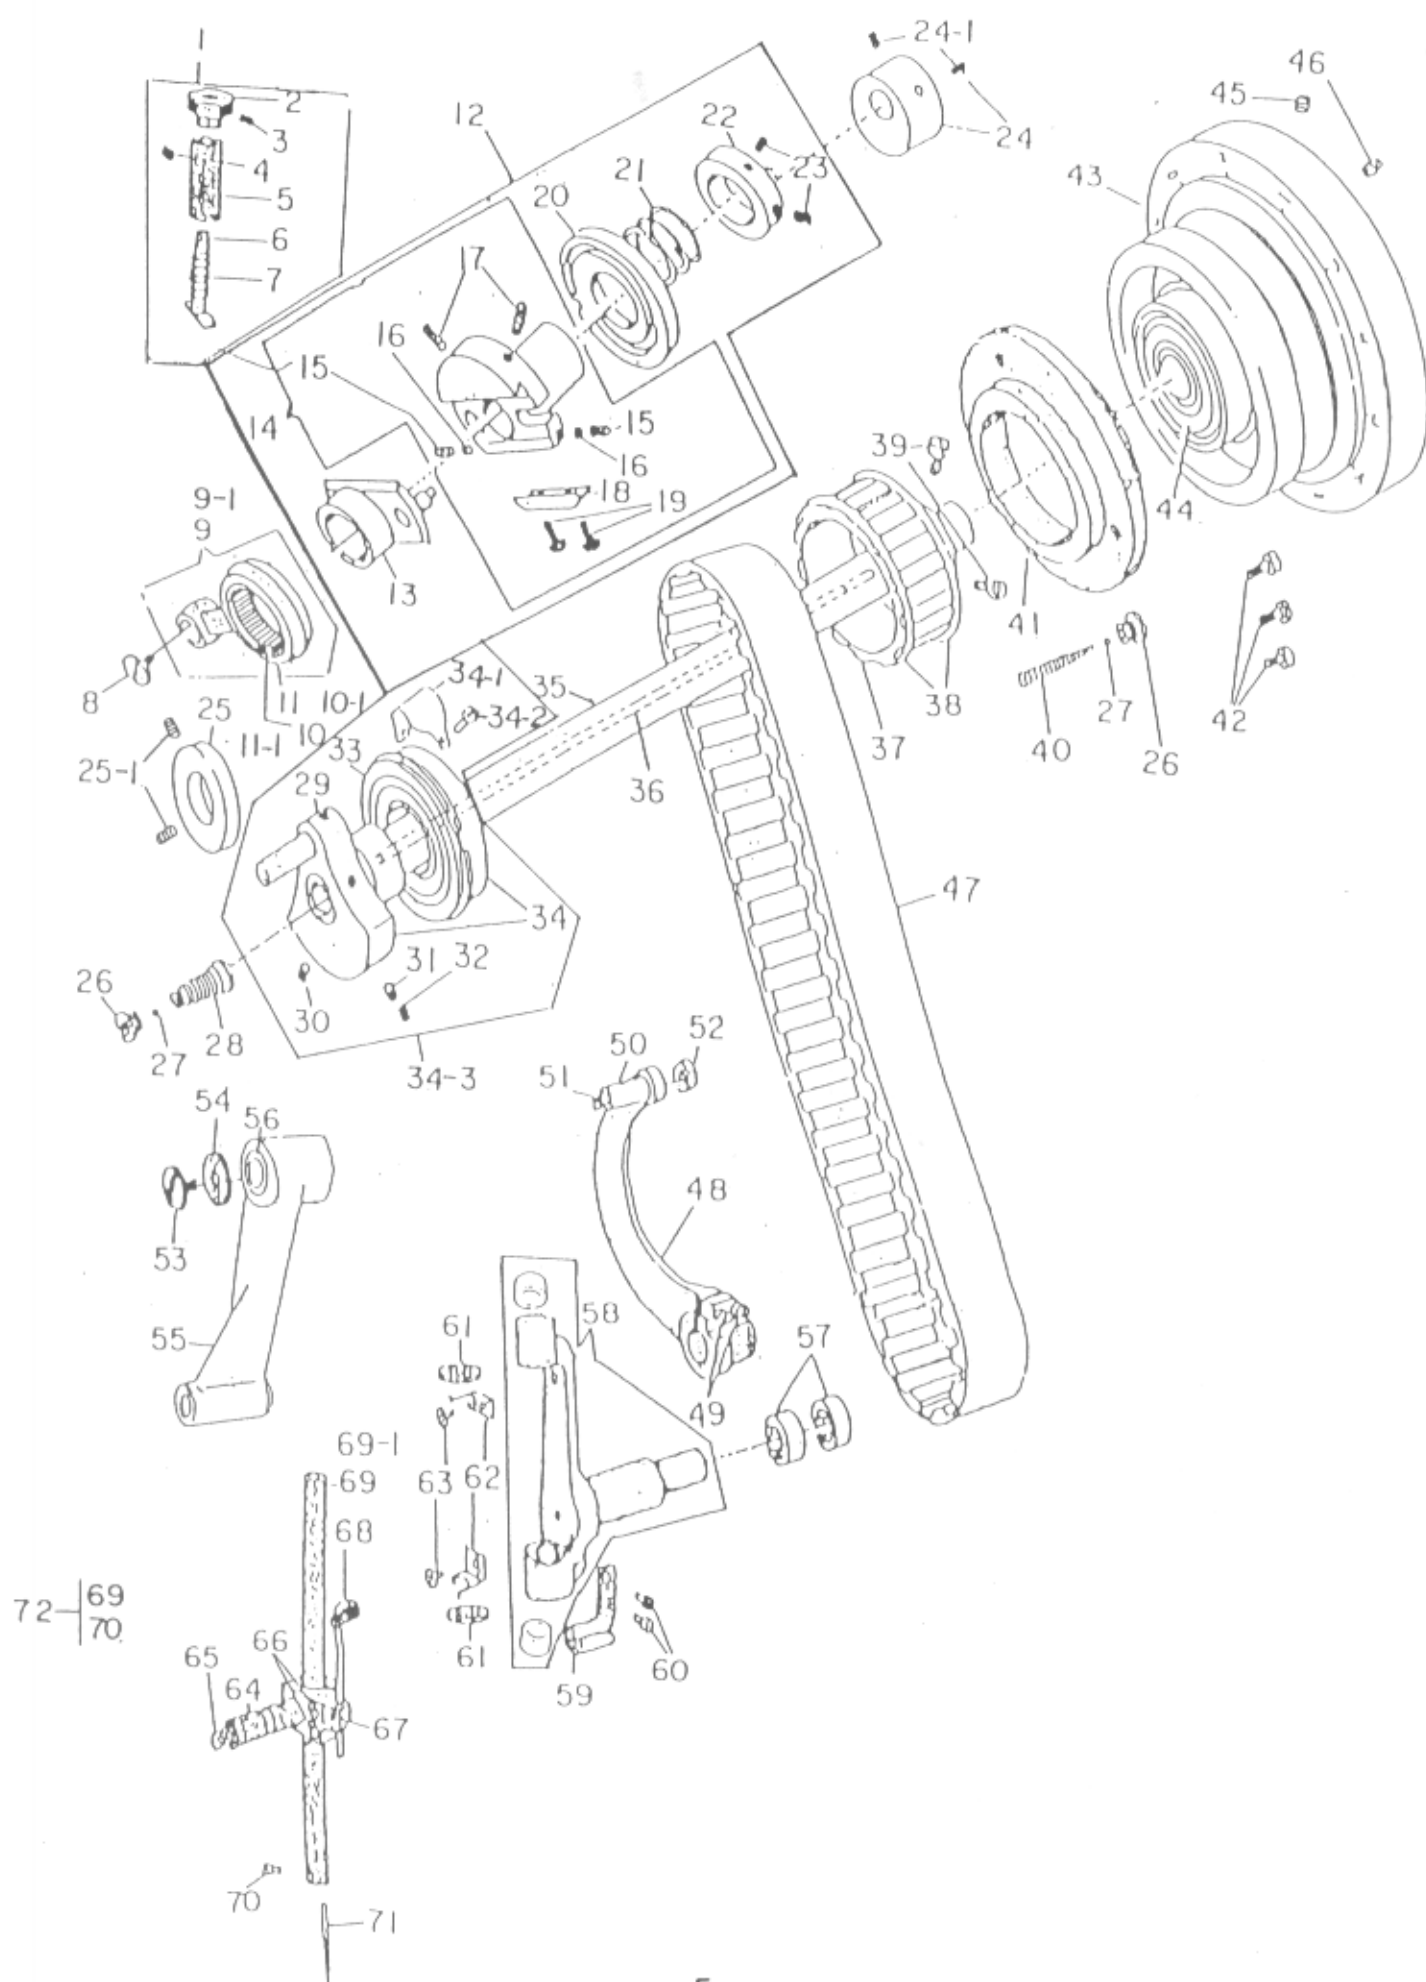


REF. NO	PART NO	DESCRIPTIONS	E.C.
61	CT 268144	NEEDLE BAR OILING FELT (2)	
62	CT 268278	NEEDLE BAR OILING FELT HOLDER (2)	
63	CT 414522	NEEDLE BAR OILING FELT HOLDER SCREW (2)	
64	CT 415053	NEEDLE BAR CONNECTION STUD	
65	CT 202330	NEEDLE BAR CONNECTION STUD OIL PACKING (WICK)	
66	CT 414511	NEEDLE BAR CONNECTION STUD PINCH SCREW (2)	
67	CT 414545	NEEDLE THREAD GUIDE SET SCREW	
68	CT 268512	NEEDLE THREAD GUIDE	
69	CT 415041	NEEDLE BAR OF 101A, 103A, 194A	
69-1	CT 415043	NEEDLE BAR OF 201A/203A/205A/401A/405A	
70	CT 414519	NEEDLE SET SCREW	
71	CT CAT.3260	NEEDLE	
72	CT 415040	NEEDLE BAR	

3. DRIVING SHAFT COMPONENTS

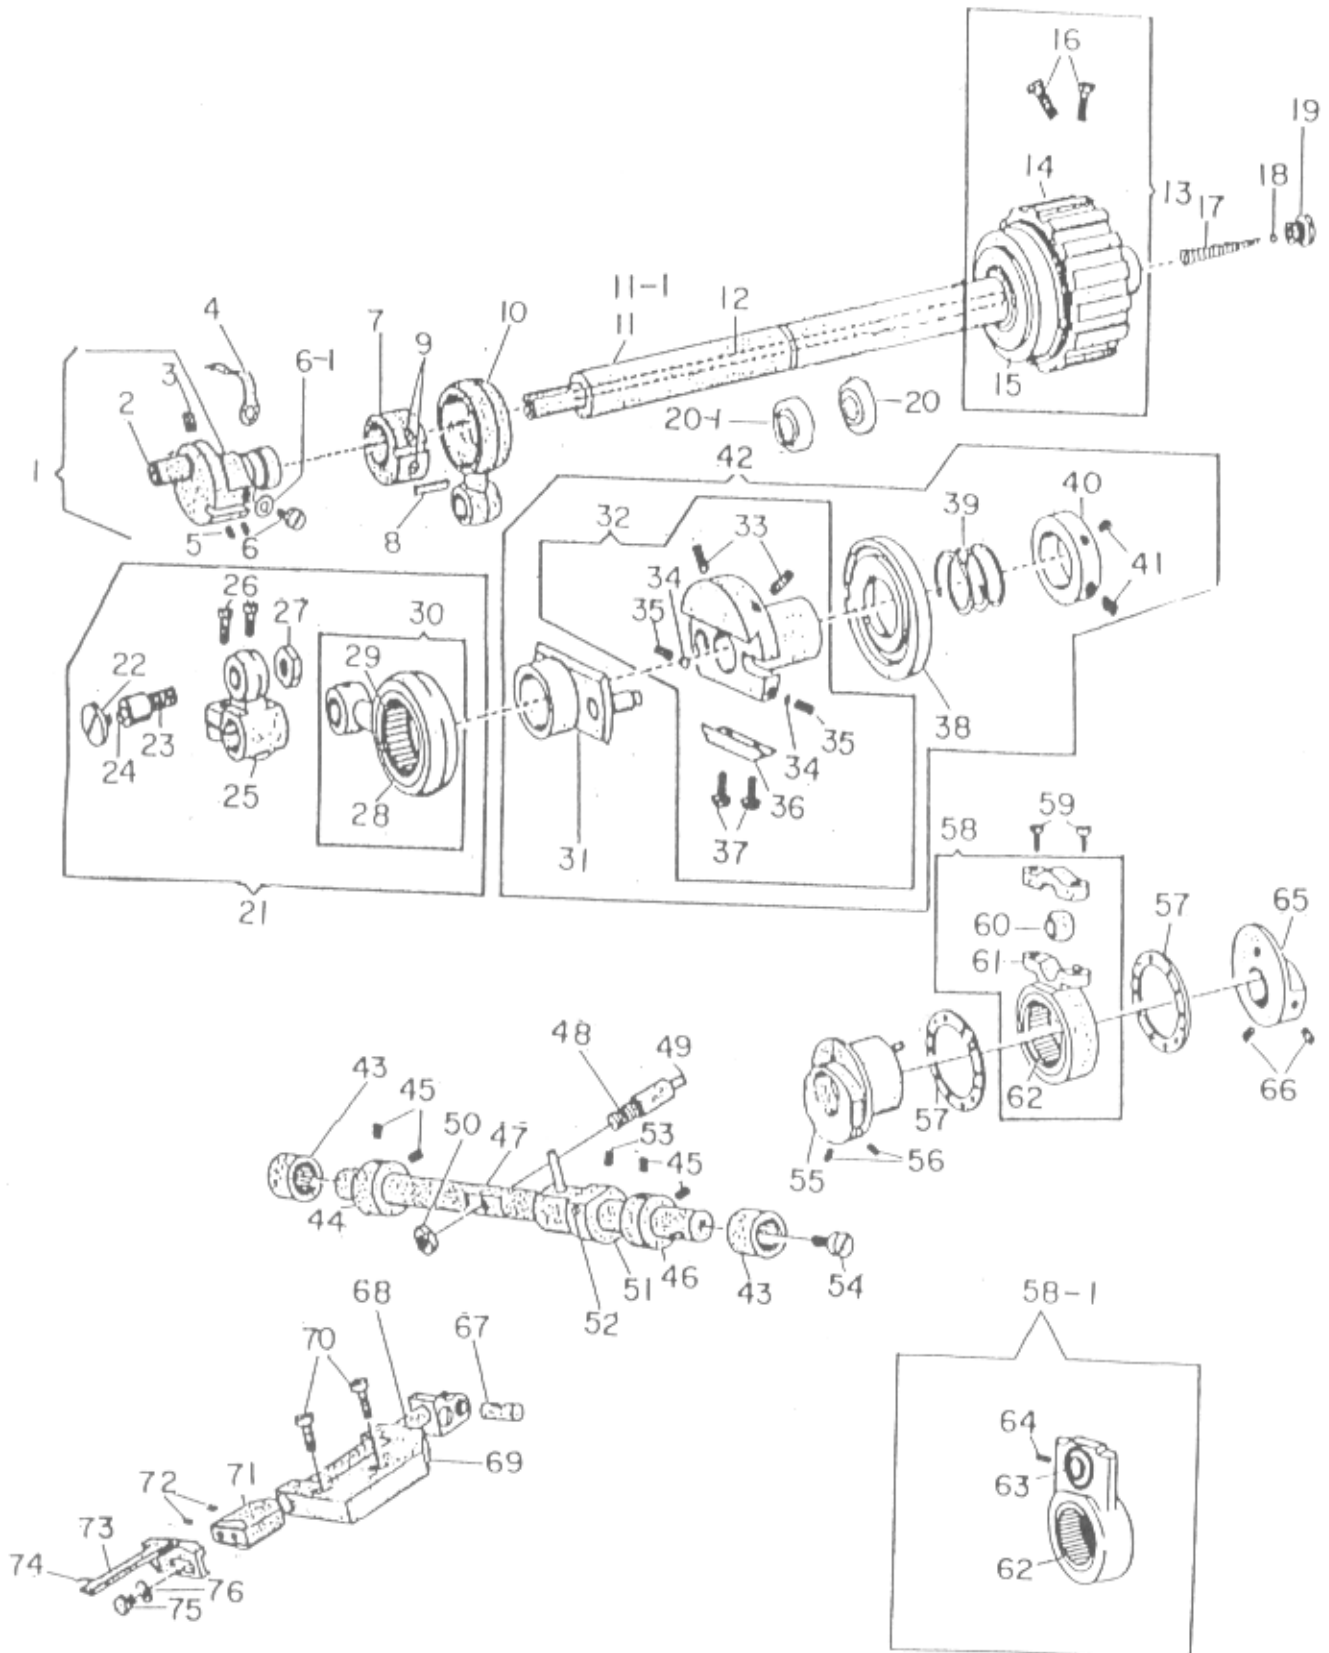




REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 415176	LOOPER DRIVING CRANK	
2	CT 414536	LOOPER DRIVING CRANK OIL STOP SCREW	
3	CT 500264-833	LOOPER DRIVING CRANK SET SCREW	
4	CT 268102	LOOPER DRIVING CRANK OIL HOLE COVER	
5	CT 374099	LOOPER DRIVING CRANK POSITION SCREW (2)	
6	CT 414563	LOOPER DRIVING CRANK OIL HOLE COVER SCREW	
6-1	CT 204925	LOOPER DRIVING CRANK OIL HOLE COVER SCREW WASHER	
7	CT 415210	FEED LIFTING ECCENTRIC	
8	CT 268077	FEED LIFTING ECCENTRIC LUBRICATING PAD (WOOD)	
9	CT 544204-001	FEED LIFTING ECCENTRIC SET SCREW (2)	
10	CT 268074	FEED LIFTING CONNECTION	
11	CT 415145	BED SHAFT	
11-1	CT 281212	BED SHAFT	
12	CT 268265	BED SHAFT OIL CONTROL ROD (WOOD)	
13	CT 415159	BED SHAFT CONNECTION BELT PULLEY	
14	CT 415160	BED SHAFT CONNECTION BELT PULLEY	
15	CT 272142	BED SHAFT BALL BEARING	
16	CT 414546	BED SHAFT CONNECTION BELT PULLEY SET SCREW (2)	
17	CT 268044	BED SHAFT OIL STOP BALL SPRING	
18	CT 268214	BED SHAFT OIL STOP BALL	
19	CT 414578	BED SHAFT OIL STOP BALL SCREW	
20	CT 281224	BED SHAFT NEEDLE BEARING (2)	
20-1	CT 281216	BED SHAFT NEEDLE BEARING (2)	
21	CT 415212	FEED DRIVING ROCK SHAFT CRANK	
22	CT 545297	FEED DRIVING CONNECTION CAP SCREW	
23	CT 415091	FEED DRIVING CONNECTION HINGE STUD	
24	CT 268258	FEED DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)	
25	CT 415213	FEED DRIVING ROCK SHAFT CRANK	
26	CT 414511	FEED DRIVING ROCK SHAFT CRANK PINCH SCREW (2)	
27	CT 541197	FEED DRIVING CONNECTION HINGE STUD NUT	
28	CT 268060M	FEED DRIVING CONNECTION	
29	CT 268063M	FEED DRIVING CONNECTION NEEDLE BEARING	
30	CT 268061M	FEED DRIVING CONNECTION	
31	CT 268064	FEED DRIVING ECCENTRIC	
32	CT 415073	FEED DRIVING FLANGE	
33	CT 414555	FEED DRIVING FLANGE SET SCREW (2)	
34	CT 241763	FEED DRIVING ECCENTRIC SET SCREW PACKING (BRASS) (2)	
35	CT 414557	FEED DRIVING ECCENTRIC SET SCREW (2)	
36	CT 267623	LIFTING ECCENTRIC FRICTION PLATE	
37	CT 374098	FEED DRIVING ECCENTRIC PLATE SCREW (2)	
38	CT 268065	FEED DRIVING ECCENTRIC ADJUSTING DISC	
39	CT 268066	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING	
40	CT 412011	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR	
41	CT 544325	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)	
42	CT 415072	FEED DRIVING ECCENTRIC COMPLETE	
43	CT 415297	FEED DRIVING ROCK SHAFT NEEDLE BUSHING (2)	
44	CT 415065	SPREADER DRIVING ROCK SHAFT COLLAR	
45	CT 504020	FEED DRIVING ROCK SHAFT COLLAR SET SCREW (2)	
46	CT 415065	FEED DRIVING ROCK SHAFT COLLAR	
47	CT 415389	SPREADER DRIVING ROCK SHAFT	
48	CT 415293	SCREW STUD	
49	CT 32825	SPREADER DRIVING ROCK SHAFT STUD OIL PACKING (WICK)	
50	CT 545424	SPREADER DRIVING ROCK SHAFT STUD NUT	
51	CT 415194	SPREADER DRIVING CRANK	
52	CT 544204-001	FEED LIFTING LINK HINGE PIN SET SCREW	
53	CT 544204-001	FEED BAR SET SCREW	
54	CT 504019	LOOPER THREAD TAKE-UP ROD SET SCREW	
55	CT 415187	SPREADER DRIVING ECCENTRIC	
56	CT 414528	SPREADER DRIVING ECCENTRIC SET SCREW (2)	
57	CT 268220	SPREADER DRIVING ECCENTRIC THRUST WASHER(2)	
58	CT 415183	SPREADER DRIVING CONNECTION	
58-1	CT 281246	SPREADER DRIVING CONNECTION	
59	CT 414569	SPREADER DRIVING CONNECTION CAP SCREW	
60	CT 351876	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER	
61	CT 415184	SPREADER DRIVING CONNECTION	
62	CT 415368M	SPREADER DRIVING CONNECTION NEEDLE BEARING (268063M)	

3. DRIVING SHAFT COMPONENTS

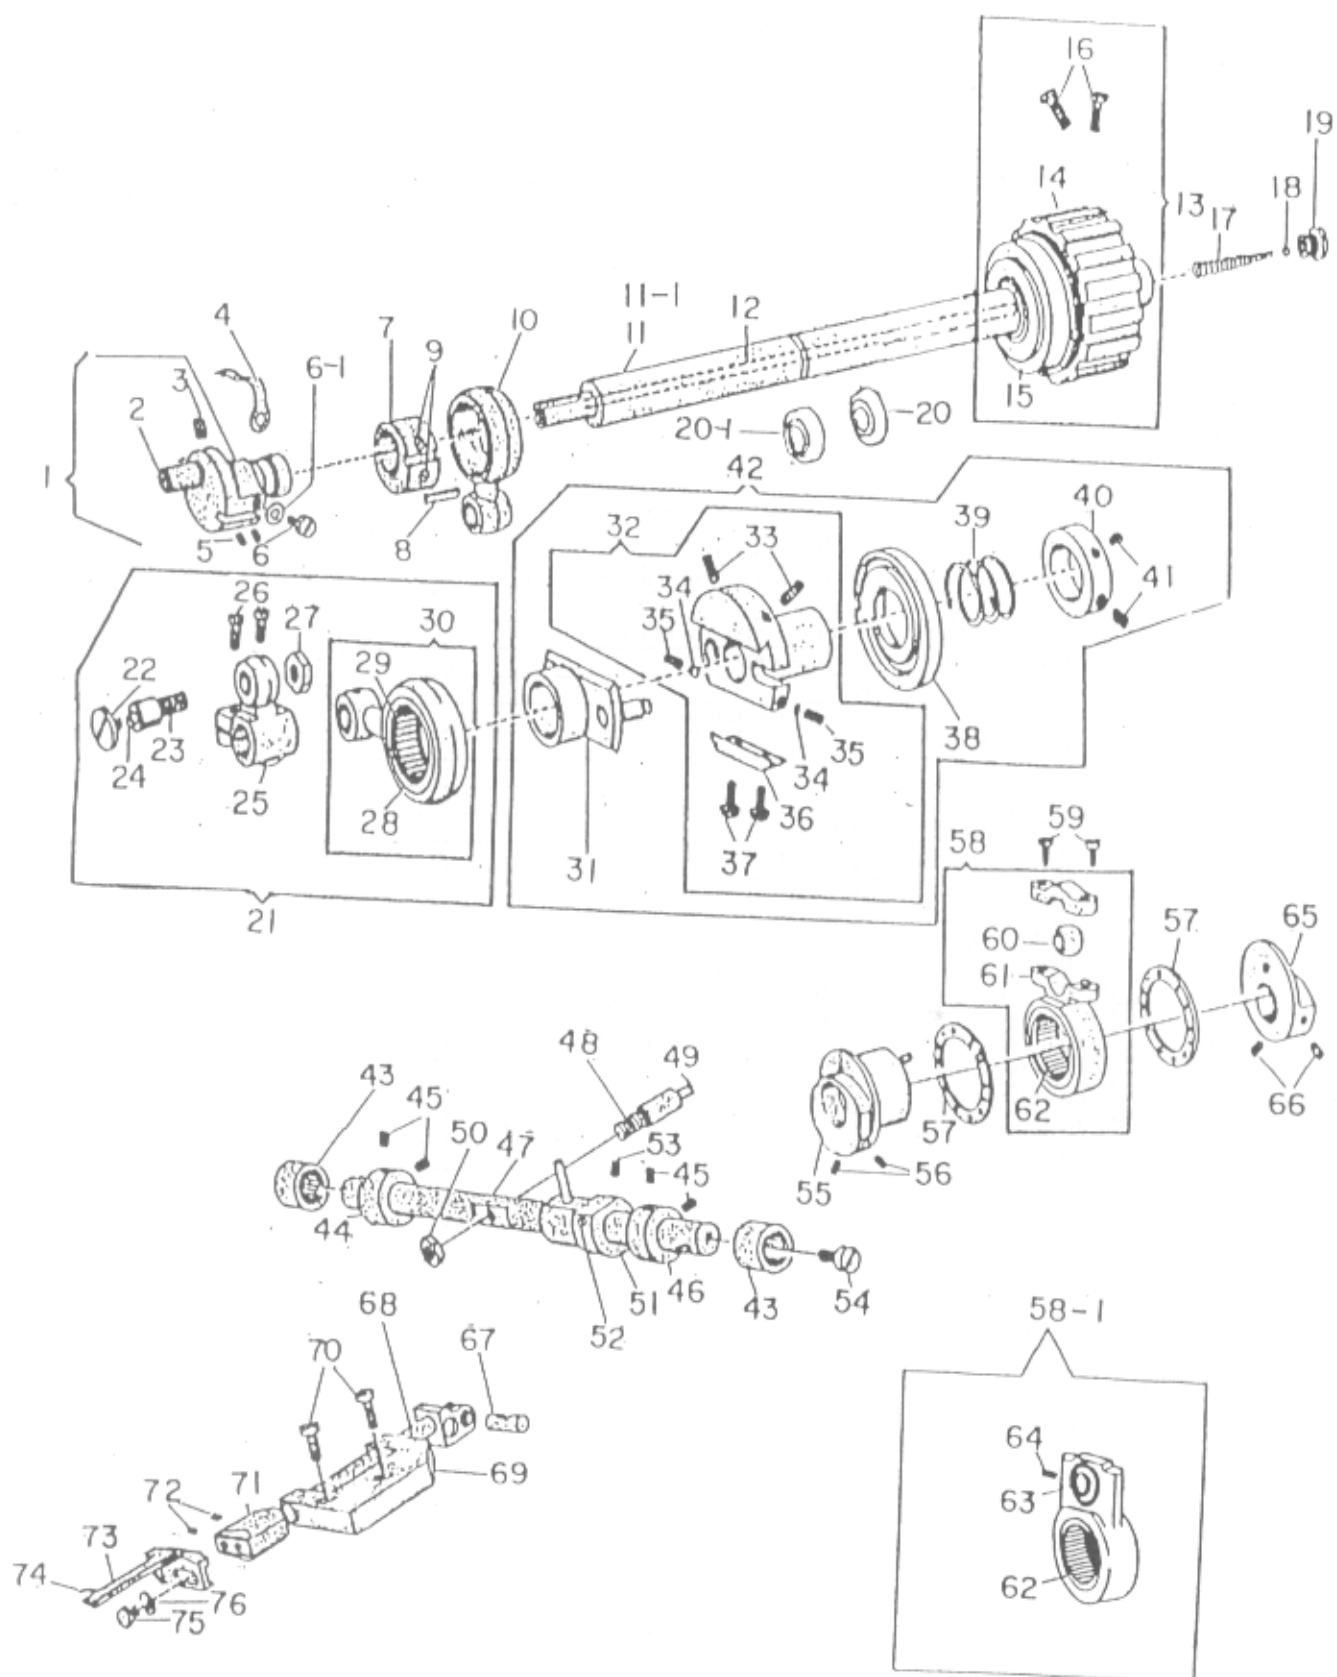


REF. NO	PART NO	DESCRIPTIONS	E.C.
63	CT 281248	BALL ROLLER	
64	CT 544203-001	SET SCREW	
65	CT 415190	SPREADER DRIVING ECCENTRIC COUNTERBALANCE	
66	CT 414528	SPREADER DRIVING ECCENTRIC SET SCREW (2)	
67	CT 268190	SPREADER DRIVING PIN	
68	CT 268499	SPREADER BAR (268181)	
69	CT 268184	SPREADER BAR BEARING	
70	CT 414524	SPREADER BAR BEARING SCREW (2)	
71	CT 415196	SPREADER HOLDER	
72	CT 414529	SPREADER HOLDER SET SCREW (2)	
73	CT 268638	SPREADER	
74	CT 268162	SPREADER POINT	
75	CT 414552	SPREADER SCREW	
76	CT 547670	SPREADER SCREW WASHER (204925)	

4. THROAT PLATE FEED MECHANISM COMPONENTS

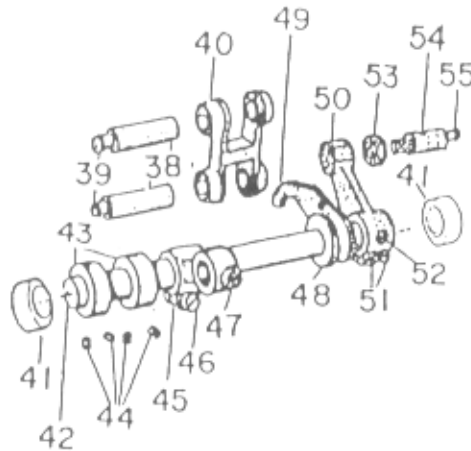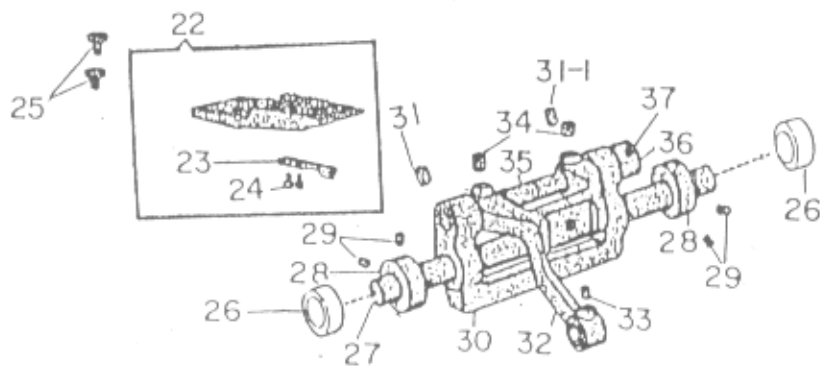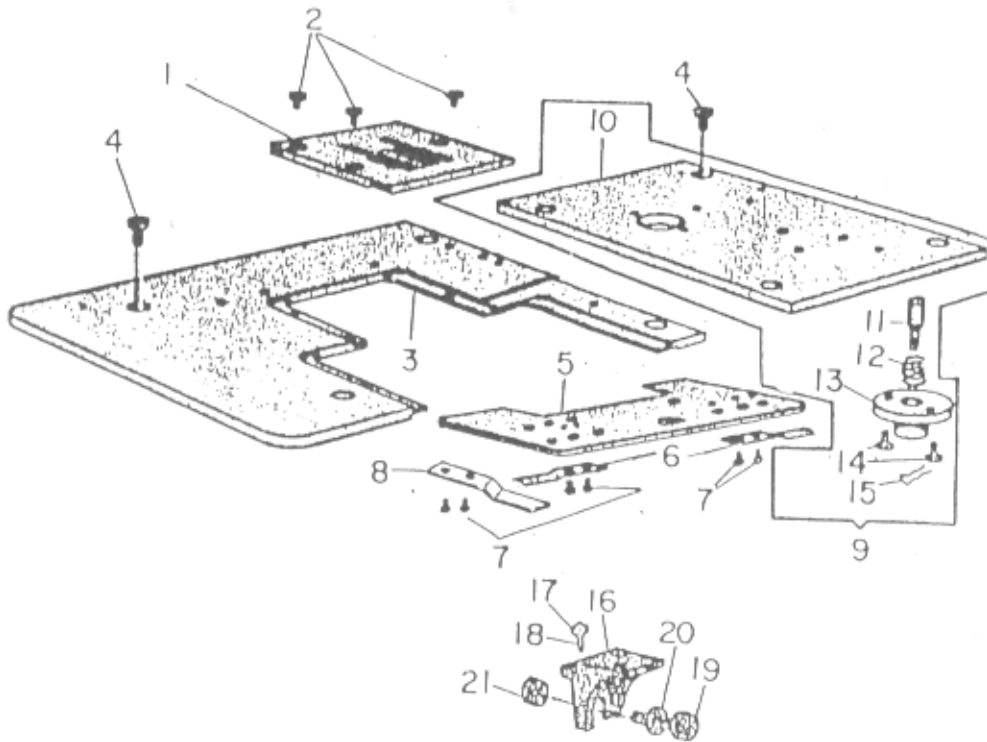


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 268614	THROAT PLATE	
2	CT 414518	THROAT PLATE SCREW (3)	
3	CT 415022-451	BED PLATE (LEFT)	
4	CT 414508	BED PLATE SCREW (8)	
5	CT 415028	BED PLATE SLIDE	
6	CT 268022	BED PLATE SLIDE SPRING (2)	
7	CT 549146	BED PLATE SLIDE SPRING SCREW (4)	
8	CT 267970	SPRING PLATE	
9	CT 415034	BED PLATE (RIGHT)	
10	CT 415035	BED PLATE (RIGHT)	
11	CT 268081	FEED REGULATING STUD	
12	CT 270026	FEED REGULATING STUD SPRING	
13	CT 268082	FEED REGULATING STUD SPRING SOCKET	
14	CT 545249-452	FEED REGULATING STUD SPRING SOCKET SCREW (2)	
15	CT 240245	FEED REGULATING STUD RETAINING SPRING	
16	CT 415208	FEED DOG SHANK	
17	CT 541200	FEED DOG SHANK ADJUSTING SCREW LOCK NUT	
18	CT 414559	FEED DOG SHANK ADJUSTING SCREW	
19	CT 414520	FEED DOG SHANK SCREW	
20	CT 543804-004	FEED DOG SHANK SCREW WASHER (208636)	
21	CT 545489	FEED DOG SHANK SCREW LOCK NUT	
22	CT 268618	FEED DOG, 46 NEEDLE HOLE	
23	CT 268318	LOOP DEFLECTOR	
24	CT 229	LOOP DEFLECTOR SCREW (2)	
25	CT 414518	FEED DOG SCREW (2)	
26	CT 415297	SPREADER DRIVING NEEDLE BUSHING (2)	
27	CT 268070	FEED DRIVING SHAFT	
28	CT 415065	SPREADER DRIVING SHAFT COLLAR (2)	
29	CT 504020	SPREADER DRIVING SHAFT COLLAR SET SCREW (4)	
30	CT 415200	FEED DRIVING ROCK FRAME	
31	CT 549024	FEED DRIVING ROCK FRAME POSITION SCREW	
31-1	CT 500264-833	FEED DRIVING ROCK FRAME SET SCREW	
32	CT 415198	FEED BAR	
33	CT 545213	FEED HINGE PIN SET SCREW	
34	CT 544204-001	FEED BAR SET SCREW (2)	
35	CT 268035	FEED BAR HINGE PIN	
36	CT 415202	FEED BAR HINGE PIN COLLAR	
37	CT 414529	FEED BAR HINGE PIN COLLAR SET SCREW	
38	CT 268079	FEED DRIVING SHAFT CRANK	
39	CT 268258	FEED HINGE STUD OIL PACKING	
40	CT 268078	FEED LIFTING LINK	
41	CT 415297	FEED SHAFT NEEDLE BUSHING (2)	
42	CT 267933	FEED LIFTING ROCK SHAFT	
43	CT 415065	FEED LIFTING SHAFT COLLAR (2)	
44	CT 504020	FEED LIFTING SHAFT COLLAR SET SCREW (2)	
45	CT 415204	FEED LIFTING CRANK	
46	CT 414501	FEED LIFTING CRANK SCREW	
47	CT 545213	FEED LIFTING HINGE PIN SET SCREW	
48	CT 543801	LOOPER SAFETY LATCH RING	
49	CT 268131	LOOPER SAFETY LATCH	
50	CT 415206	FEED LIFTING SHAFT CRANK	
51	CT 414511	FEED LIFTING SHAFT CRANK PINCH SCREW	
52	CT 414549	FEED LIFTING SHAFT CRANK POSITION SCREW	
53	CT 541197	FEED LIFTING HINGE STUD NUT	
54	CT 415091	FEED LIFTING HINGE STUD	
55	CT 268258	FEED LIFTING HINGE OIL PACKING (WICK)	

5. PRESSER BAR & TENSION RELEASE COMPONENTS

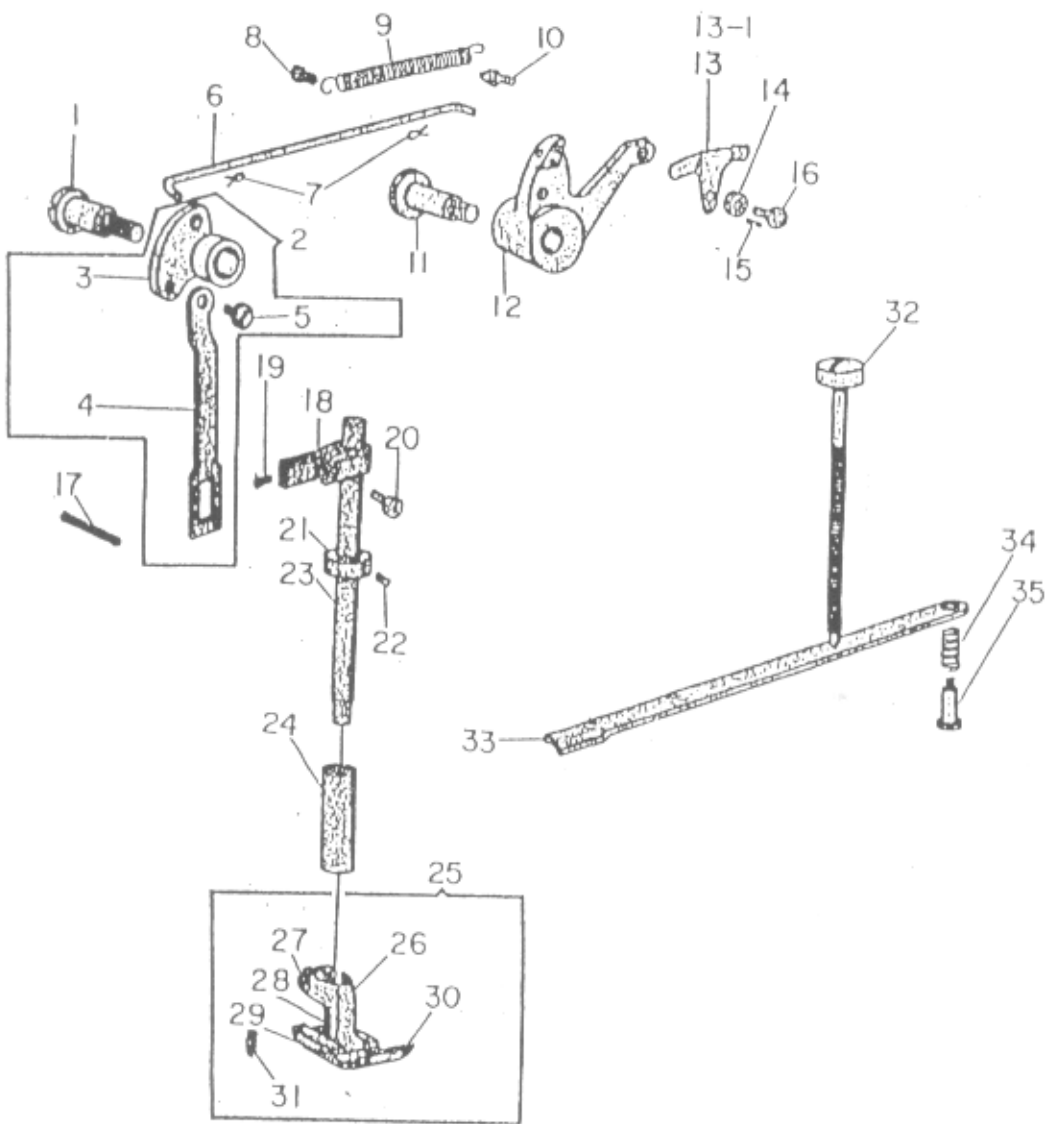


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 414572	FOOT LIFTER CRANK HINGE SCREW	
2	CT 415101-451	FOOT LIFTER CRANK	
3	CT 415102-451	FOOT LIFTER CRANK	
4	CT 269616	FOOT LIFTING LINK	
5	CT 414568	FOOT LIFTER HINGE SCREW	
6	CT 268086	FOOT LIFTER LEVER ROD	
7	CT 248423	FOOT LIFTER LEVER ROD COTTER PIN (2)	
8	CT 414555	PRESSER SPRING ADJUSTING SET SCREW	
9	CT 204348	FOOT LIFTER SPRING	
10	CT 414570	FOOT LIFTER SPRING SCREW EYE	
11	CT 201363	FOOT LIFTER HINGE SCREW	
12	CT 415104-451	FOOT LIFTER LEVER	
13	CT 268171	NEEDLE THREAD PLATE	
13-1	CT 267707	NEEDLE THREAD PLATE OF 194A	
14	CT 543804-004	NEEDLE THREAD PLATE SCREW WASHER	
15	CT 543850-001	NEEDLE THREAD PLATE PIN	
16	CT 414531	NEEDLE THREAD PLATE SCREW	
17	CT 415360	FOOT LIFTER STOP PIN	
18	CT 415057	PRESSER BAR GUIDE BRACKET	
19	CT 414535	PRESSER BAR GUIDE BRACKET SCREW	
20	CT 414513	PRESSER BAR GUIDE BRACKET SCREW	
21	CT 415055	PRESSER BAR STOP COLLAR	
22	CT 414529	PRESSER BAR STOP COLLAR SET SCREW	
23	CT 268172	PRESSER BAR	
24	CT 268173	PRESSER BAR BUSHING	
25	CT 268613	PRESSER FOOT COMPLETE	
26	CT 268275	PRESSER FOOT SHANK	
27	CT 545246-452	PRESSER FOOT SHANK SCREW	
28	CT 268612	PRESSER FOOT HEEL SPRING	
29	CT 206335	PRESSER FOOT HINGE PIN	
30	CT 268611	PRESSER FOOT PLATE	
31	CT 226080	PRESSER FOOT PLATE SPRING	
32	CT 414574	PRESSER BAR SPRING SCREW	
33	CT 268176	PRESSER BAR SPRING	
34	CT 214529	PRESSER BAR SPRING	
35	CT 414562	PRESSER BAR SPRING SCREW	

6. LOOPER COMPONENTS

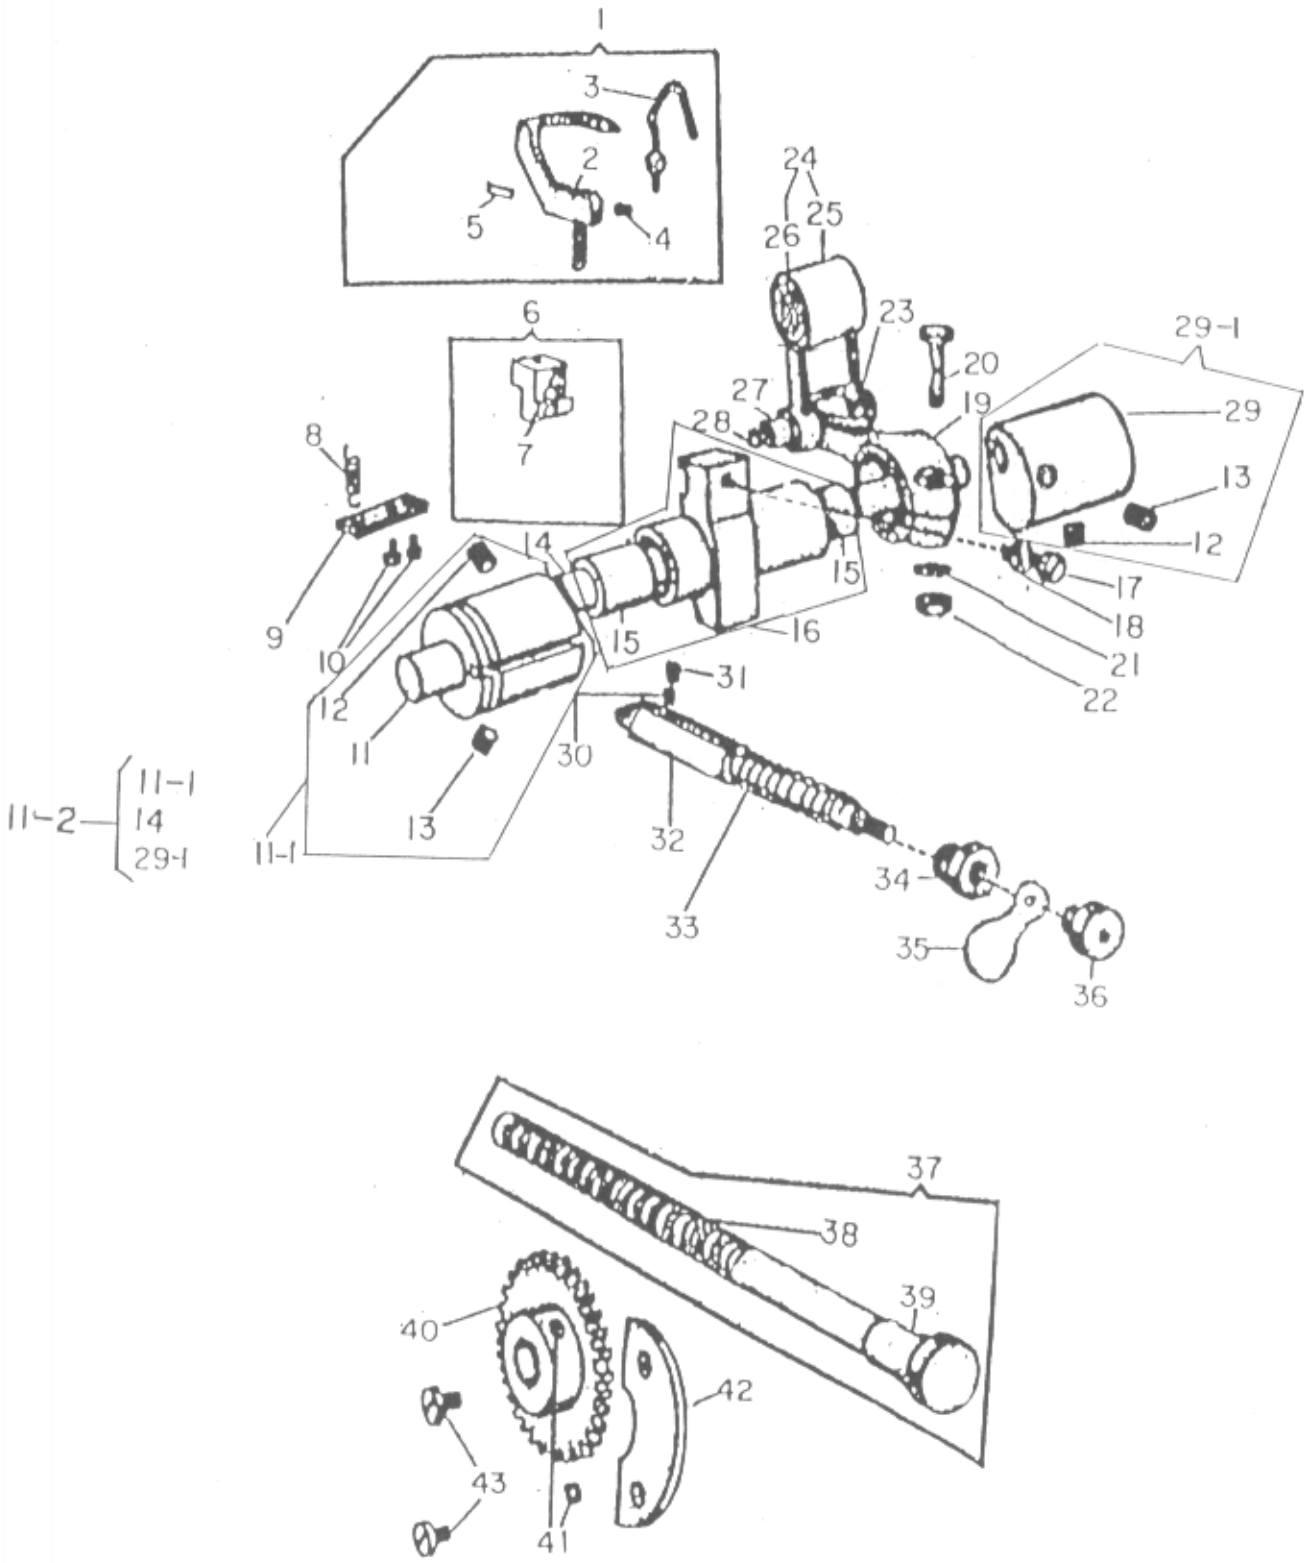


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 281208	LOOPER & NEEDLE GUARD COMPLETE (268382)	
2	CT 268380	LOOPER	
3	CT 281207	NEEDLE GUARD (268310)	
4	CT 141494	NEEDLE GUARD SCREW (FRONT)	
5	CT 141478	NEEDLE GUARD SCREW (BACK)	
6	CT 281225	LOOPER HOLDER (417056)	
7	CT 414558	LOOPER SCREW (2)	
8	CT 268132	LOOPER SAFETY SPRING	
9	CT 268133	LOOPER SAFETY SPRING BRACKET	
10	CT 545205-451	LOOPER SAFETY SPRING BRACKET SCREW	
11	CT 268094	LOOPER CARRIER SHAFT W/BUSHINGS (LEFT) WITH 500264-833 AND 549024	
11-1	CT 415168	LOOPER CARRIER SHAFT BUSHING (LEFT) WITH 500264-833 AND 549024	
11-2	CT 415167	LOOPER CARRIER SHAFT COMPLETE, NOS. 268093, 415168 AND 415170, 415500	
12	CT 500264-833	LOOPER CRANK SCREW	
13	CT 549024	LOOPER SHAFT BUSHING SCREW	
14	CT 268093	SHAFT LOOPER CARRIER	
15	CT 415500	LOOPER NEEDLE CARRIER BUSHING (2)	
16	CT 281219	LOOPER CARRIER	
17	CT 414553	LOOPER HOLDER SCREW	
18	CT 543804-004	LOOPER SCREW WASHER	
19	CT 415174	LOOPER CARRIER CRANK	
20	CT 415292	LOOPER CRANK STUD	
21	CT 548459	LOOPER CRANK STUD WASHER	
22	CT 541198	LOOPER CRANK STUD NUT	
23	CT 414516	LOOPER CRANK PINCH SCREW	
24	CT 281223S	LOOPER CONNECTION SET	
25	CT 281223	LOOPER CONNECTION	
26	CT 415500	LOOPER CONNECTION BUSHING	
27	CT 268208	LOOPER CRANK HINGE PIN	
28	CT 268258	LOOPER CRANK OIL PACKING (WICK)	
29	CT 268097	LOOPER SHAFT W/BUSHING	
29-1	CT 415170	LOOPER CARRIER SHAFT BUSHING (RIGHT) WITH 500264-833 AND 549024	
30	CT 414564	LOOPER STOP SCREW	
31	CT 414528	LOOPER STOP SCREW	
32	CT 415182	LOOPER LOCKING PLUNGER	
33	CT 250265	LOOPER PLUNGER SPRING	
34	CT 201477	LOOPER PLUNGER SCREW BUSHING	
35	CT 268313	LOOPER PLUNGER HANDLE	
36	CT 541453	LOOPER PLUNGER NUT	
37	CT 415178	LOOPER THROW-OUT ROD	
38	CT 415179	LOOPER THROW-OUT ROD	
39	CT 541451	LOOPER THROW-OUT ROD NUT	
40	CT 415180	LOOPER THROW-OUT GEAR	
41	CT 500264-833	LOOPER GEAR SCREW	
42	CT 268096	LOOPER BUSHING (LEFT) PLATE	
43	CT 414515	LOOPER BUSHING PLATE SCREW (2)	

7. THREAD TENSION CONTROLLER COMPONENTS

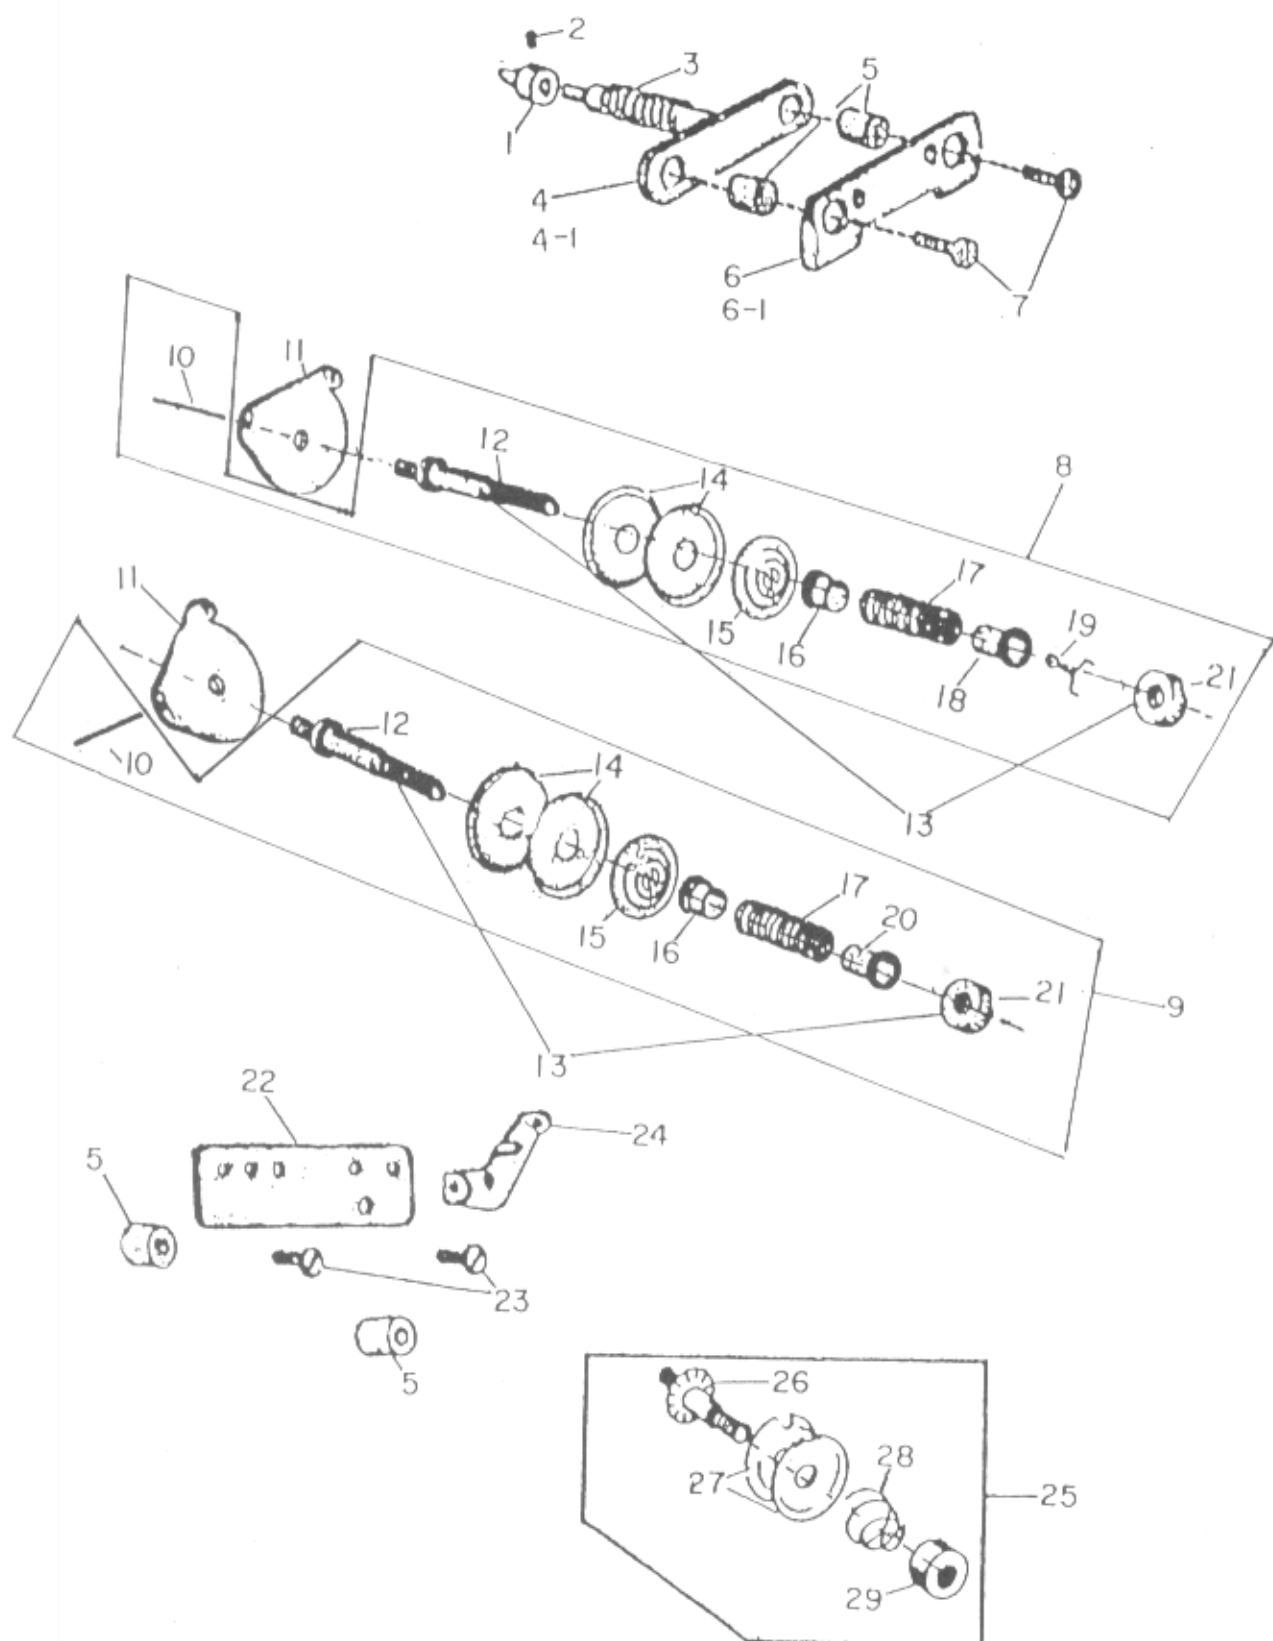


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 415252	NEEDLE THREAD CAP	
2	CT 504048	NEEDLE THREAD CAP SCREW	
3	CT 204365	NEEDLE THREAD SPRING	
4	CT 415357	NEEDLE THREAD TENSION RELEASER	
4-1	CT 268515	NEEDLE THREAD TENSION RELEASER OF 194A	
5	CT 268121	NEEDLE THREAD SPACING COLLAR	
6	CT 268167	NEEDLE THREAD BRACKET	
6-1	CT 268514	NEEDLE THREAD BRACKET OF 194A	
7	CT 544336	NEEDLE THREAD BRACKET SCREW (2)	
8	CT 267971	NEEDLE THREAD TENSION COMPLETE	
9	CT 268263	NEEDLE THREAD TENSION COMPLETE	
10	CT 226206	NEEDLE THREAD PIN	
11	CT 54279	NEEDLE THREAD GUIDE (DOUBLE)	
12	CT 50326(803)	NEEDLE THREAD STUD	
13	CT 59539	NEEDLE THREAD STUD	
14	CT 2102	NEEDLE THREAD DISC (2)	
15	CT 32572	NEEDLE THREAD DISC	
16	CT 59538	NEEDLE THREAD SPRING BUSHING (BACK)	
17	CT 131741	NEEDLE THREAD SPRING	
18	CT 143657	NEEDLE THREAD SPRING BUSHING	
19	CT 143658	NUT LOCK SPRING	
20	CT 59537	NEEDLE THREAD SPRING BUSHING (FRONT)	
21	CT 51570(830)	NEEDLE THREAD NUT	
22	CT 415255	LOOPER THREAD BRACKET	
23	CT 414532	LOOPER THREAD BRACKET SCREW (2)	
24	CT 268333	LOOPER THREAD GUIDE	
25	CT 415294	LOOPER THREAD COMPLETE	
26	CT 415291	LOOPER THREAD STUD	
27	CT 412203	LOOPER THREAD DISC (2) (244048)	
28	CT 10148	LOOPER THREAD SPRING	
29	CT 541452	LOOPER THREAD NUT	

8. 103A 194A MACHINE FRAME & MISCELLANEOUS COVER COMPONENTS

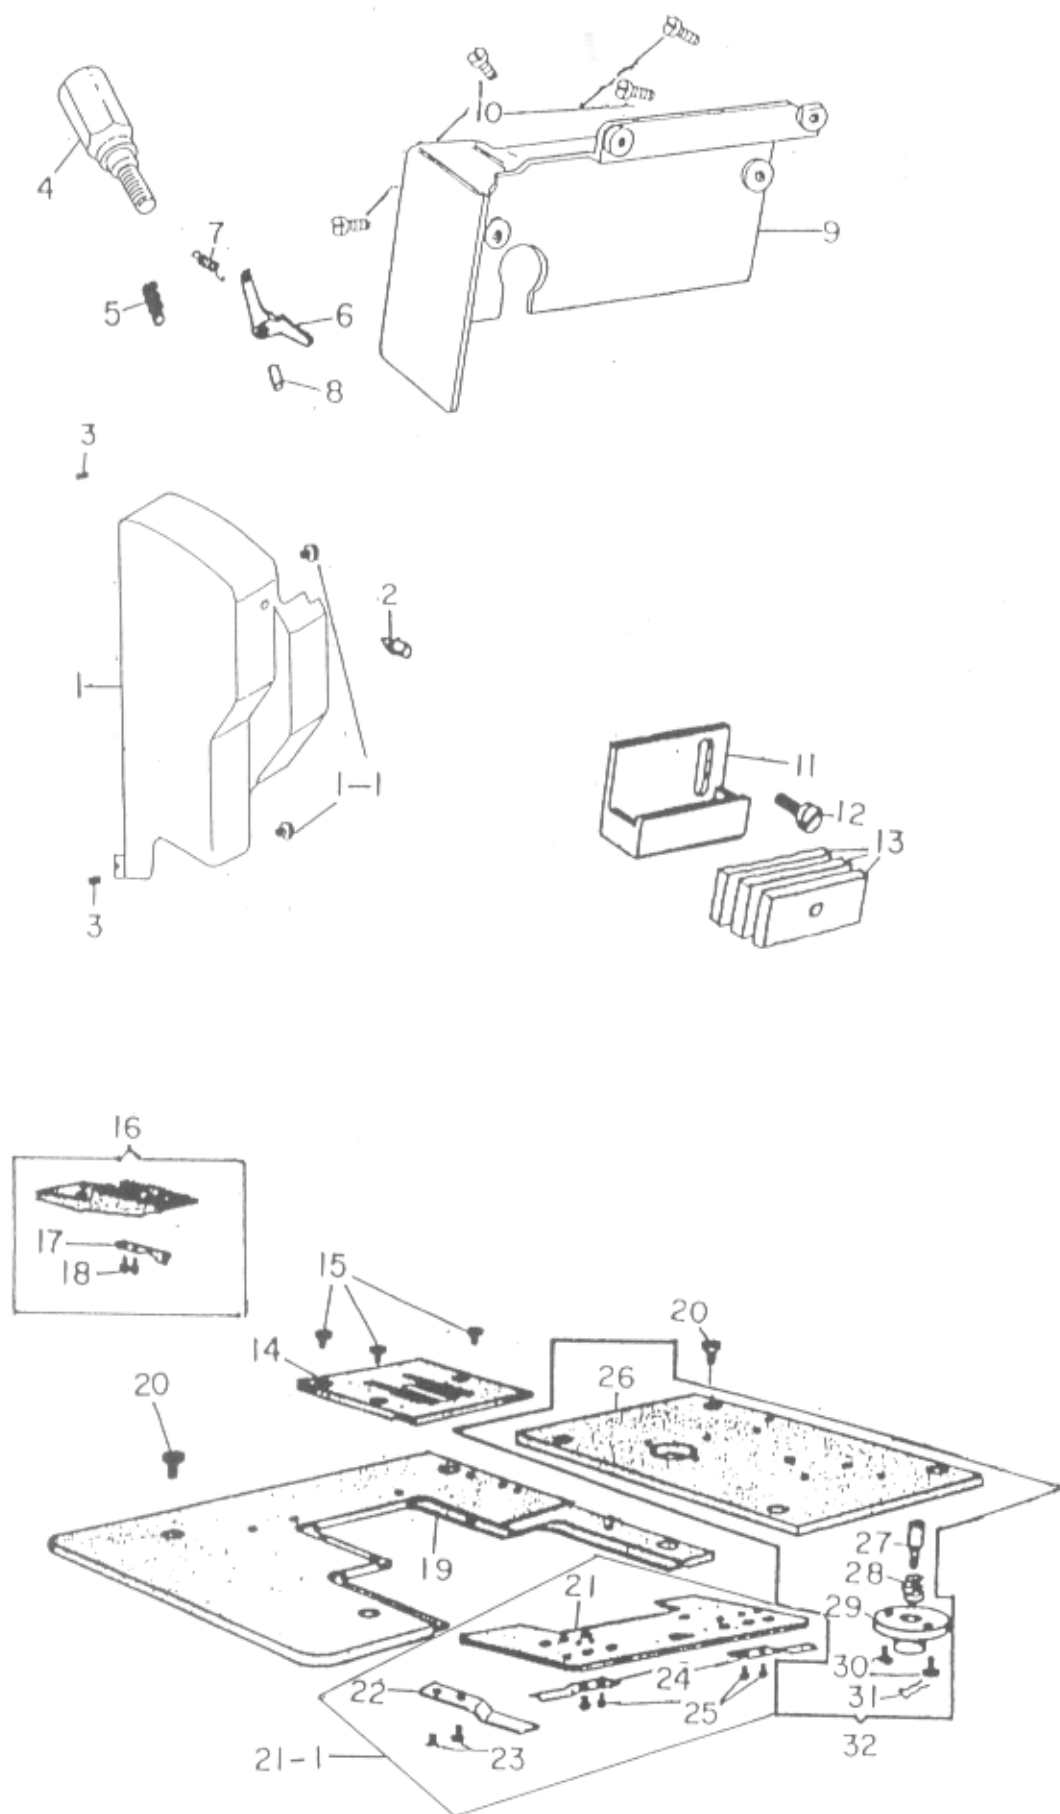


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 415014	BED PLATE	
11-1	CT 228661	FACE PLATE CUSHION (NEOPRENE) (2)	
2	CT 268033	FACE PLATE LOCK STUD	
3	CT 545174-452	FACE PLATE STUD SCREW (2)	
4	CT 415459	LIGHT FIXTURE STUD (NOT AVAILABLE NOW)	
5	CT 414571	FOOT LIFTER LEVER (FRONT) STUD	
6	CT 267613	FOOT LIFTER LEVER (FRONT)	
7	CT 203941	FOOT LIFTER LEVER (FRONT) SPRING	
8	CT 267614	FOOT LIFTER LEVER (FRONT) PIN	
9	CT 559079	ARM SIDE COVER	
10	CT 545246-452	PRESSER FOOT SCREW (4)	
11	CT 267656	THREAD LUBRICATOR	
12	CT 504019	LOOPER THREAD SCREW	
13	CT 236957	THREAD LUBRICATOR OIL PAD (3)	
14	CT 32827	THROAT PLATE	
15	CT 414518	THROAT PLATE SCREW (3)	
16	CT 267664	FEED DOG, 40 NEEDLE HOLE	
17	CT 267665	LOOP DEFLECTOR	
18	CT 229	LOOP DEFLECTOR SCREW	
19	CT 415026	BED PLATE (LEFT)	
20	CT 414508	BED PLATE SCREW (8)	
21	CT 415028	BED PLATE SLIDE	
21-1	CT 415027	BED PLATE SLIDE WITH TWO 268022 AND 267970 WITH SIX 549146	
22	CT 267970	SPRING	
23	CT 549146	BED PLATE SLIDE SPRING SCREW (2)	
24	CT 268022	BED PLATE SLIDE SPRING	
25	CT 549146	BED PLATE SPRING SCREW (4)	
26	CT 415035	BED PLATE (RIGHT)	
27	CT 268081	FEED STUD	
28	CT 270026	FEED STUD SPRING	
29	CT 268082	FEED STUD SOCKET	
30	CT 545249-452	FEED STUD SOCKET SCREW (2)	
31	CT 240245	FEED STUD SPRING	
32	CT 415034	BED PLATE (RIGHT)	

9. 103A 194A MAIN SHAFT, NEEDLE FEED & NEEDLE BAR COMPONENTS

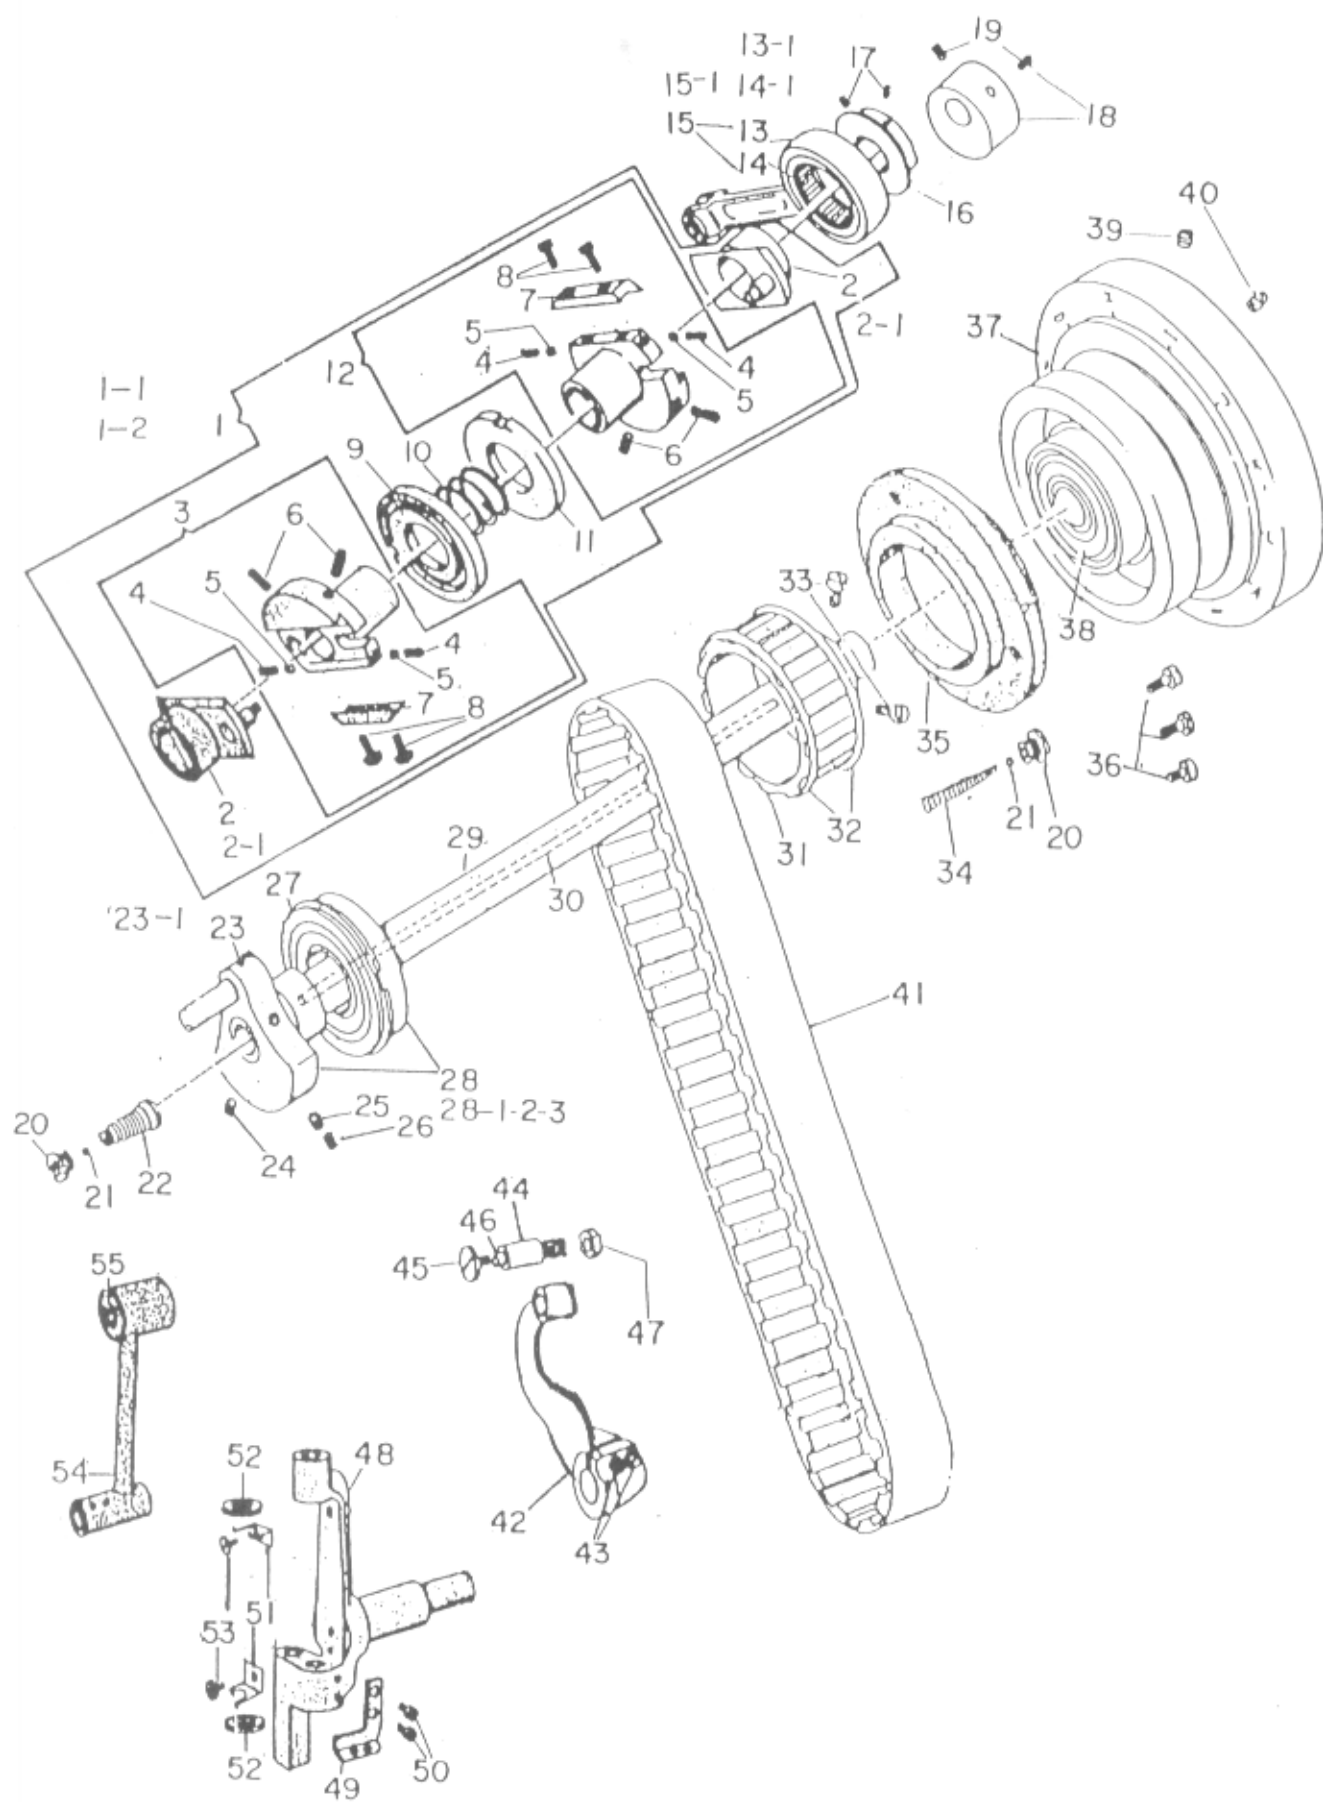


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 415075	LIFTING & NEEDLE BAR FRAME COMPLETE OF 103A	
1-1	CT 415080	LIFTING & NEEDLE BAR FRAME COMPLETE OF 194A	
1-2	CT 415081	LIFTING & NEEDLE BAR FRAME COMPLETE OF 194A	
2	CT 268064	NEEDLE BAR FRAME OF 103A	
2-1	CT 267610	NEEDLE BAR FRAME OF 194A	
3	CT 415078	NEEDLE BAR FRAME DRIVING FLANGE	
4	CT 414557	NEEDLE BAR FRAME SCREW (2)	
5	CT 241763	NEEDLE BAR FRAME SCREW PACKING	
6	CT 414555	NEEDLE BAR FRAME DRIVING FLANGE SCREW (2)	
7	CT 267623	NEEDLE BAR FRAME DRIVING PLATE	
8	CT 374098	NEEDLE BAR FRAME DRIVING PLATE SCREW (2)	
9	CT 268065	NEEDLE BAR FRAME ADJUSTING DISC	
10	CT 267618	ADJUSTING DISC SPRING	
11	CT 268065	NEEDLE BAR FRAME ADJUSTING DISC	
12	CT 415076	LIFTING FLANGE	
13	CT 268492M	LIFTING CONNECTION OF 103A	
13-1	CT 268490M	LIFTING CONNECTION OF 194A	
14	CT 268063M	NEEDLE BAR BEARING OF 103A	
14-1	CT 271055M	NEEDLE BAR BEARING OF 194A	
15	CT 268493M	LIFTING CONNECTION OF 103A	
15-1	CT 268491M	LIFTING CONNECTION OF 194A	
16	CT 415086	LIFTING COLLAR	
17	CT 414529	COLLAR SCREW (2)	
18	CT 281256	COUNTERBALANCE W/TWO 544208-005 SET SCREW (2)	
19	CT 544208-005	COUNTERBALANCE W/TWO 544208-005 SET SCREW (2)	
20	CT 414578	BED SHAFT OIL STOP SCREW	
21	CT 268214	BED SHAFT OIL STOP BALL	
22	CT 268009	ARM SHAFT SPRING (FRONT)	
23	CT 415133	NEEDLE BAR CRANK OF 103A	
23-1	CT 415138	NEEDLE BAR CRANK OF 194A	
24	CT 500272-833	NEEDLE BAR CRANK SCREW	
25	CT 549024	NEEDLE BAR CRANK SCREW	
26	CT 544358	NEEDLE BAR CRANK SCREW	
27	CT 32848	ARM SHAFT BEARING (FRONT)	
28	CT 415132	NEEDLE BAR CRANK W/CT 32848 OF 103A	
28-1	CT 281209	NEEDLE BAR CRANK W/CT 32848, CT 281206 AND TWO CT 545205-451 OF 103A	
28-2	CT 415137	NEEDLE BAR CRANK W/CT 32848 OF 194A	
28-3	CT 281239	NEEDLE BAR CRANK W/CT 32848, CT 281206 AND TWO CT 545205-451 OF 194A	
29	CT 415128	ARM SHAFT	
30	CT 268264	ARM SHAFT OIL CONTROL ROD	
31	CT 415157	ARM SHAFT BELT PULLEY	
32	CT 202253	ARM SHAFT PULLEY SPRING FLANGE	
33	CT 414546	ARM SHAFT PULLEY SCREW (2)	
34	CT 268044	ARM SHAFT SPRING (REAR)	
35	CT 268004	ARM SHAFT BEARING (BACK) HOUSING	
36	CT 544336	ARM SHAFT BEARING HOUSING SCREW	
37	CT 415153-451	MACHINE PULLEY CT 415154 W/CT 272142 AND CT 414525, CT 414526	
38	CT 272142	BED SHAFT BALL BEARING (CT 268024)	
39	CT 414525	MACHINE PULLEY SCREW	
40	CT 414526	MACHINE PULLEY SCREW	
41	CT 268270	ARM SHAFT BELT	
42	CT 415094	NEEDLE BAR DRIVING ARM	
43	CT 414790	NEEDLE BAR PINCH SCREW (2)	
44	CT 415092	NEEDLE BAR HINGE STUD	
45	CT 545297	NEEDLE BAR CAP SCREW	
46	CT 268258	NEEDLE BAR HINGE STUD OIL PACKING	
47	CT 541197	NEEDLE BAR STUD NUT	
48	CT 415045	NEEDLE BAR ROCK FRAME	
49	CT 268219-012	NEEDLE BAR THREAD GUIDE	
50	CT 414539	NEEDLE BAR THREAD GUIDE SCREW	
51	CT 268278	NEEDLE BAR OIL HOLDER	
52	CT 268144	NEEDLE BAR OIL FELT	
53	CT 414522	NEEDLE BAR OIL HOLDER SCREW	
54	CT268055M	NEEDLE BAR CONNECTING LINK WITH TWO CT270266M	
55	CT270266M	NEEDLE BAR CONNECTING LINK NEEDLE BEARING(2)	

10. 103A 194A PRESSER BAR & TENSION RELEASE COMPONENTS

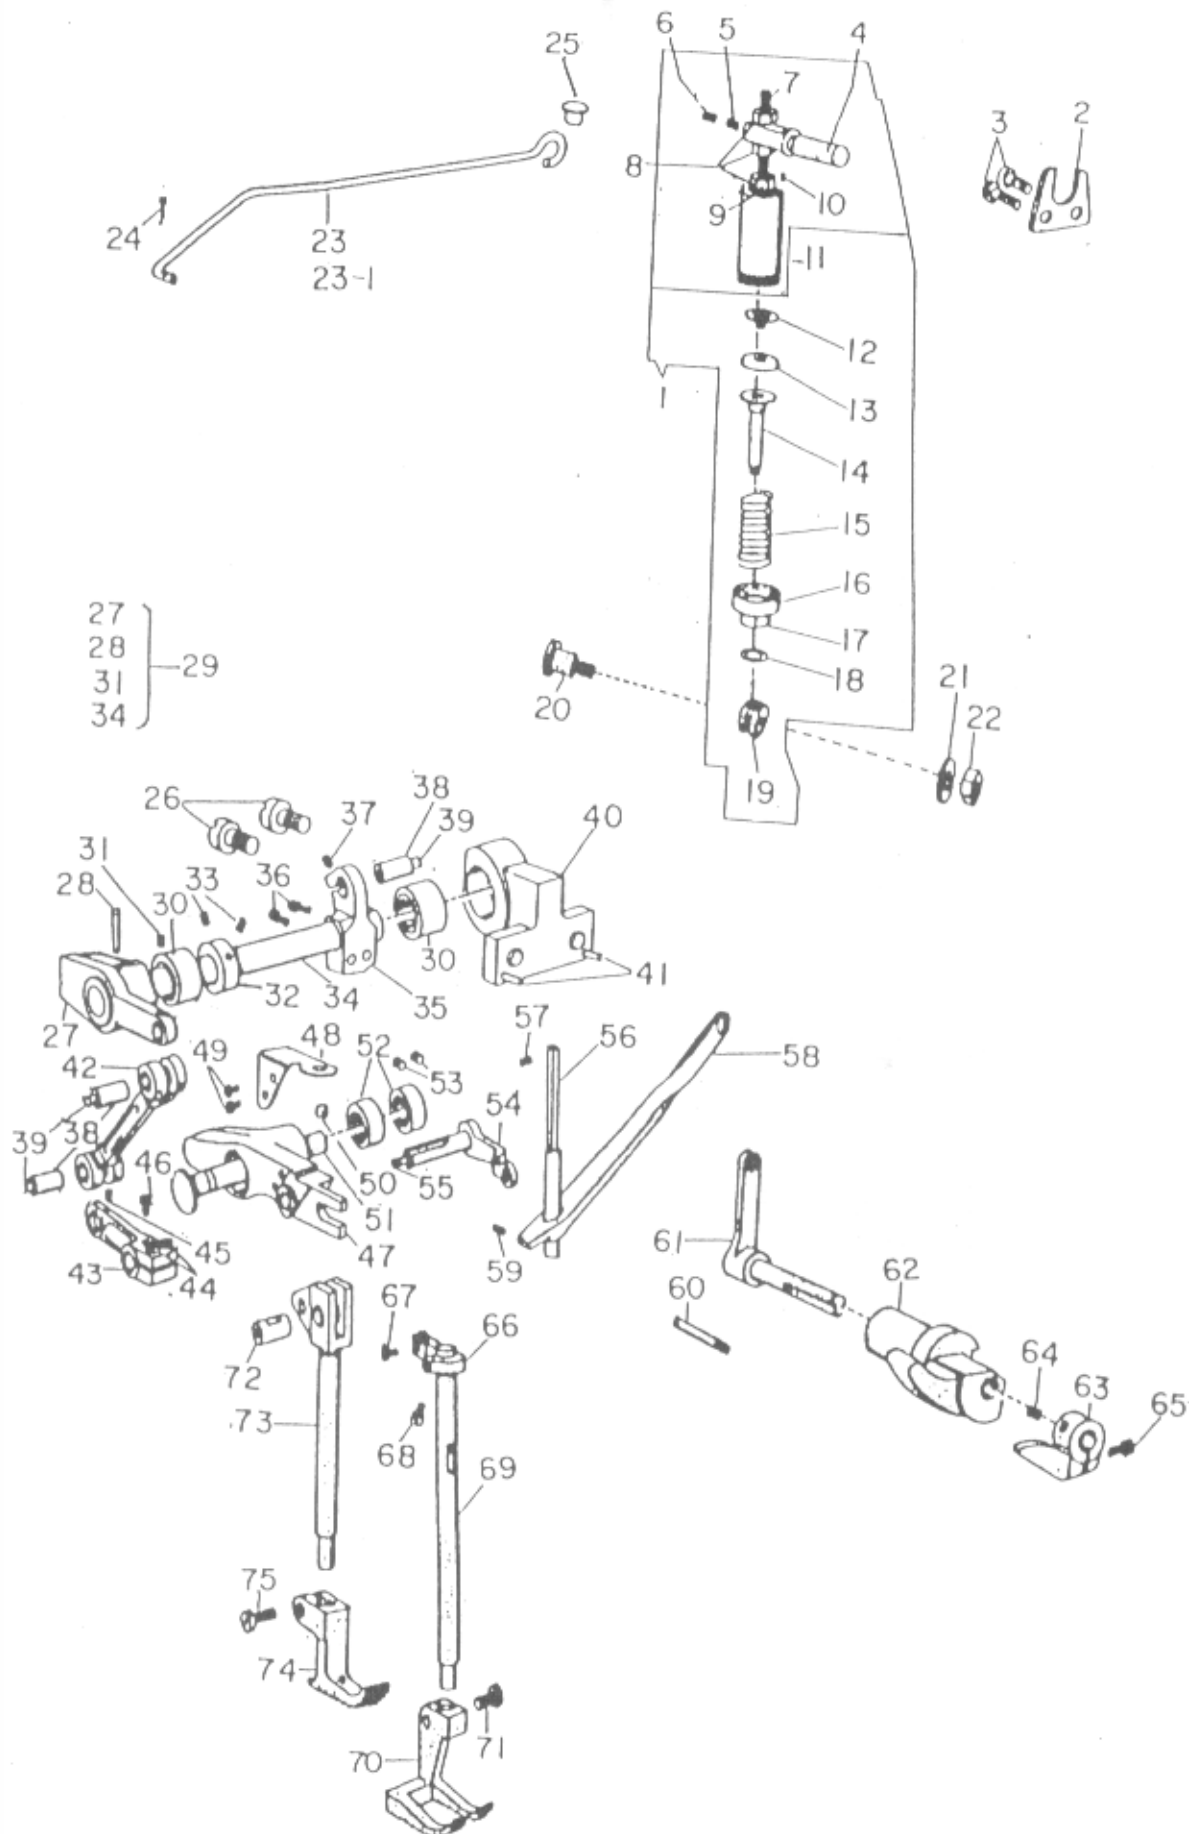


REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 415106	PRESSER BAR SPRING HOUSING COMPLETE OF 103A	
2	CT 267650	PRESSER BAR SPRING HOUSING SUPPORT RETAINER	
3	CT 545205-451	PRESSER BAR SPRING HOUSING SUPPORT RETAINER SCREW (2)	
4	CT 415111	PRESSER BAR SPRING HOUSING SUPPORT	
5	CT 244084	PRESSER BAR SPRING HOUSING SCREW PACKING	
6	CT 544358	PRESSER BAR SPRING HOUSING SCREW	
7	CT 414579	PRESSER BAR SPRING HOUSING STUD	
8	CT 541198	PRESSER BAR SPRING STUD NUT (3)	
9	CT 67425	PRESSER BAR SPRING STUD NUT LOCK WASHER	
10	CT 414523	PRESSER BAR SPRING OIL SCREW	
11	CT 415107	PRESSER BAR SPRING HOUSING	
12	CT 415115	PRESSER BAR SPRING CAP	
13	CT 267655	PRESSER BAR SPRING WASHER	
14	CT 415387	PRESSER BAR SPRING PLUNGER	
15	CT 415386	PRESSER BAR SPRING (267641)	
16	CT 415109	PRESSER BAR SPRING PLUNGER BEARING W/267653	
17	CT 267653	PRESSER BAR SPRING BEARING BUSHING	
18	CT 267645	PRESSER BAR SPRING LOCK WASHER	
19	CT 415113	PRESSER BAR SPRING ARM FORK	
20	CT 414567	PRESSER BAR SPRING HINGE SCREW	
21	CT 548154	PRESSER BAR SPRING HINGE SCREW WASHER	
22	CT 545405	PRESSER BAR SPRING HINGE SCREW NUT	
23	CT 267615	FOOT LIFTER LEVER ROD OF 103A	
23-1	CT 267704	FOOT LIFTER LEVER ROD OF 194A	
24	CT 248423	FOOT LIFTER LEVER ROD PIN (1)	
25	CT 502986	ARM HEAD PLUG	
26	CT 414504	LIFTING SHAFT BRACKET SCREW (2)	
27	CT 32788	LIFTING SHAFT CRANK	
28	CT 548035	LIFTING SHAFT CRANK PIN (2022)	
29	CT 32789	LIFTING SHAFT CRANK SETS	
30	CT 267110M	LIFTING SHAFT NEEDLE BEARING	
31	CT 141424	LIFTING PIN SCREW	
32	CT 415065	LIFTING SHAFT COLLAR	
33	CT 504020	LIFTING SHAFT COLLAR SCREW (2)	
34	CT 267633	LIFTING ROCK SHAFT	
35	CT 415069	LIFTING CONNECTION CRANK	
36	CT 414509	NEEDLE BAR DRIVING ARM PINCH SCREW (2)	
37	CT 414543	LIFTING CONNECTION CRANK SCREW	
38	CT 267617	LIFTING CONNECTION HINGE PIN (3)	
39	CT 268258	NEEDLE BAR HINGE STUD OIL PACKING (3)	
40	CT 415071	LIFTING SHAFT BRACKET	
41	CT 543841-001	JOINT PIN (2)	
42	CT 267627	LIFTING LINK	
43	CT 415061	LIFTING CRANK	
44	CT 414511	LIFTING CRANK SCREW (2)	
45	CT 141424	LIFTING LINK PIN SCREW	
46	CT 141338	LIFTING CRANK SCREW	
47	CT 415067M	LIFTING LEVER	
48	CT 267718	PRESSER BAR BEARING RETAINER	
49	CT 414548	PRESSER BAR BEARING RETAINER SCREW (2)	
50	CT 276025	PRESSER BAR SPRING ARM BALL	
51	CT 267626	LIFTING LEVER HINGE STUD	
52	CT 267093M	LIFTING LEVER NEEDLE BEARING (2)	
53	CT 544322	LIFTING LEVER STUD SCREW (2)	
54	CT 267631	PRESSER BAR LIFTING CRANK	
55	CT 268258	PRESSER BAR LIFTING CRANK OIL PACKING	
56	CT 267907	PRESSER BAR GUIDE ROD	
57	CT 544301	PRESSER BAR GUIDE ROD SCREW	
58	CT 267738	PRESSER BAR SPRING ARM	
59	CT 414530	PRESSER BAR GUIDE ROD SCREW	
60	CT 414566	FOOT LIFTER STOP SCREW STUD	
61	CT 267612	FOOT LIFTER CRANK	
62	CT 267646	LIFTING PRESSER ARM SPRING	
63	CT 415120	FOOT LIFTER ARM	
64	CT 545213	FOOT LIFTER SCREW	
65	CT 414509	FOOT LIFTER SCREW	

10. 103A 194A PRESSER BAR & TENSION RELEASE COMPONENTS

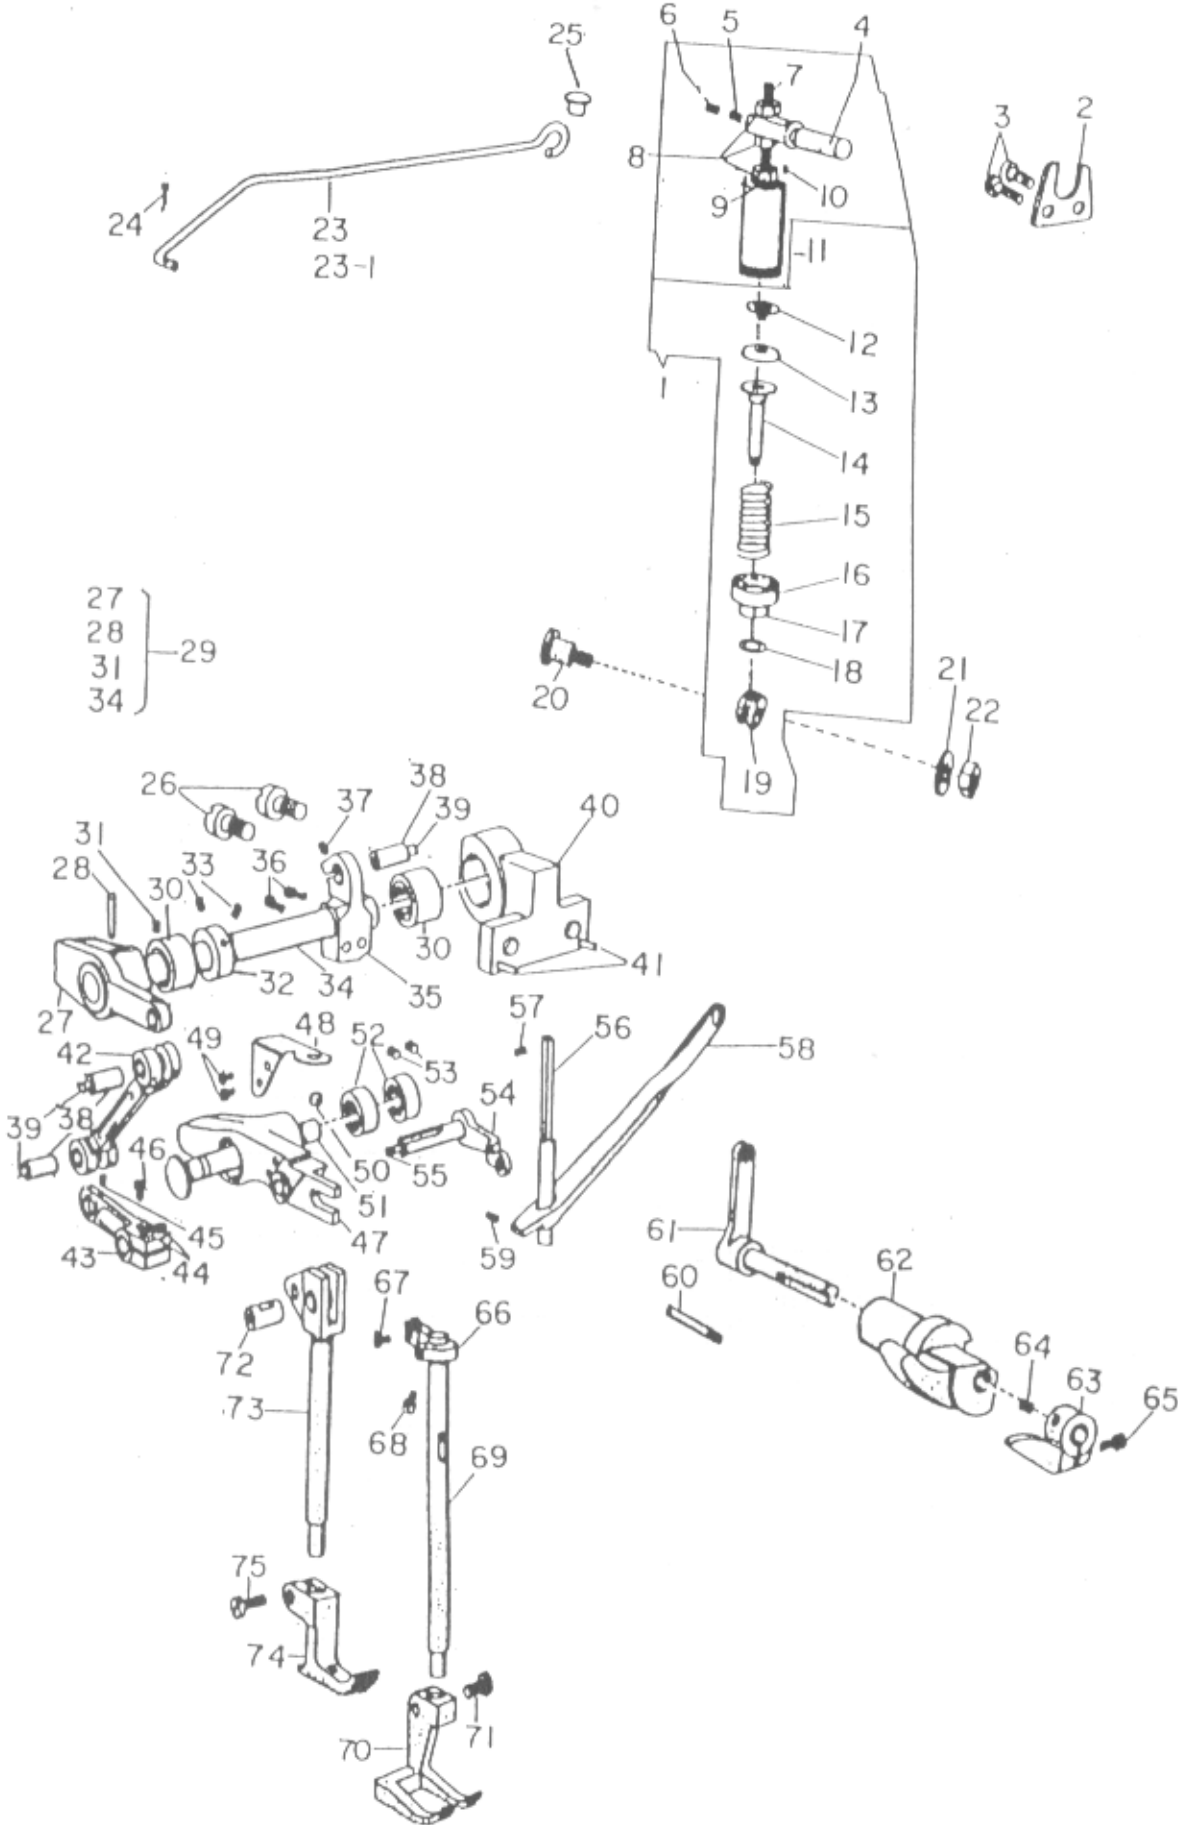

REF. NO	PART NO	DESCRIPTIONS	E.C.
66	CT 415059	PRESSER BAR GUIDE BLOCK	
67	CT 414516	PRESSER BAR GUIDE BLOCK SCREW	
68	CT 414512	PRESSER BAR GUIDE BLOCK SCREW	
69	CT 267628	LIFTING PRESSER BAR	
70	CT 267632	LIFTING PRESSER FOOT	
71	CT 414638	ARM SIDE COVER SCREW	
72	CT 267658	VIBRATING PRESSER BAR STUD	
73	CT 267657	VIBRATING PRESSER BAR	
74	CT 267659	VIBRATING PRESSER FOOT	
75	CT 414638	VIBRATING PRESSER FOOT SCREW	

11. 194A PRESSER BAR & TENSION RELEASE COMPONENTS

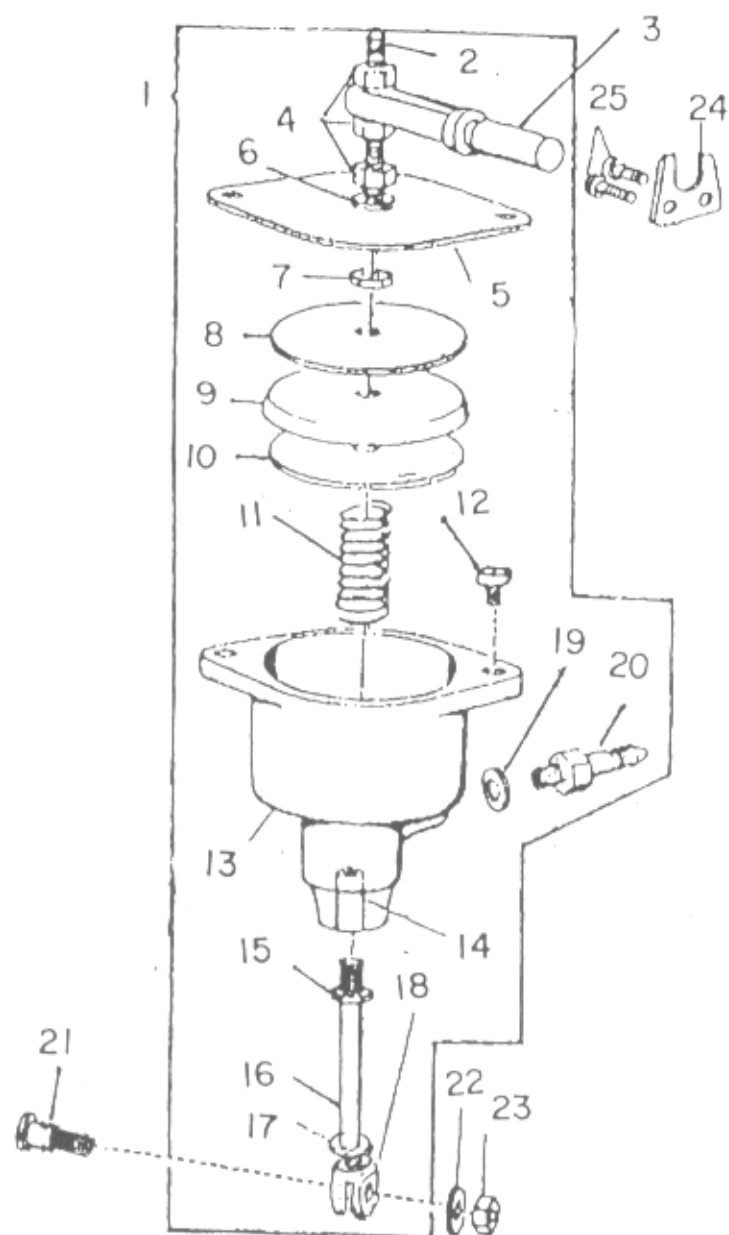

REF. NO	PART NO	DESCRIPTIONS	E.C.
1	CT 267715	PRESSER BAR SPRING HOUSING COMPLETE	
2	CT 350579	PRESSER BAR SPRING HOUSING SCREW STUD	
3	CT 267714	PRESSER BAR SPRING HOUSING SUPPORT	
4	CT 201746	PRESSER BAR SPRING HOUSING ADJUSTING NUT (2)	
5	CT 267709	IRON PLATE	
6	CT 67425	LOOPER STUD WASHER	
7	CT 1517	NUT	
8	CT 267713	IRON WASHER	
9	CT 267712	LEATHER WASHER	
10	CT 267711	IRON WASHER	
11	CT 267716	PRESSER BAR SPRING	
12	CT 201110	SCREW (2)	
13	CT 267708	MAIN BLOCK	
14	CT 267653	PRESSER AR BEARING BUSHING	
15	CT 1517(803)	NUT	
16	CT 267710	PRESSER BAR SPRING PLUNGER	
17	CT 267645	PRESSER BAR LOCK WASHER	
18	CT 267644	PRESSER BAR ARM FORK	
19	CT 23184	WASHER	
20	CT 994778	BALL SCREW	
21	CT 200928	PRESSER BAR HINGE SCREW	
22	CT 22748	PRESSER BAR HINGE WASHER	
23	CT 201622	PRESSER BAR HINGE NUT	
24	CT 267650	PRESSER BAR SUPPORT RETAINER	
25	CT 200098	PRESSER BAR SUPPORT RETAINER SCREW (2)	

12.NEEDLE GAUGE AND FITTING COMPONENTS

Regular fitting

Single needle	Feed dog		Throat plate	Presser foot	Lifting presser	Vibrating presser
CT 300U101A	268618		268614	268613	-	-
CT 300U103A	267664		32827	-	267632	267659
CT 300U194A	267664		32827	-	267632	267659

Two needle	in	mm	Feed dog	Throat plate	Presser foot	Lifting presser	Vibrating presser
CT 300U203A	1/4	6.4	267802-016	267851-016	-	267676-016	267679-016
	3/8	9.5	267804-024	267853-024	-	267677-024	267680-024
	1/2	12.7	267812-032	267855-032	-	267677-032	267680-032
	3/4	19.1	267821-048	267858-048	-	267677-048	267680-048


Needle gauge

Regular fitting


STANDARD GAUGES			LOOPER HOLDER	NEEDLE BAR ROCK FRAME	NEEDLE HOLDER	PRESSER FOOT	SPREADER	THROAT PLATE	FEED DOG
Two needle	in	mm	THREAD GUIDE		(COMPLETE)				
CT 300U201A	3/16(012)	4.8	268103	268219	268151	267880	268374	267851	267800
CT 300U205A	1/4(016)	6.4	268103	268219	268151	267872	268374	267851	267802
	3/8(024)	9.5	268104	268254	268152	267872	268375	267853	267804
	1/2(032)	12.7	268104	268254	268152	267872	268375	267855	267812
	5/8(040)	15.9	268104	268254	268152	267872	268375	267857	267817
	3/4(048)	19.1	268105	268255	268154	267872	268376	267858	267821
	7/8(056)	22.2	268105	268255	268154	267874	268376	267858	267821
	1(100)	25.4	268106	268256	268156	267874	268377	267859	267825
	1 1/4(116)	31.8	268107	268268	268157	269577	268378	267859	267825
	1 3/8(124)	34.9	268107	268268	268157	269577	268378	267860	267829
	1 1/2(132)	38.1	268107	268268	268157	269577	268378	267860	267829
	1 3/4(148)	44.5	268282	268304	268158	269577	268379	267861	267833

STANDARD GAUGES			LOOPER HOLDER	NEEDLE BAR ROCK FRAME	NEEDLE HOLDER	PRESSER FOOT	SPREADER	THROAT PLATE	FEED DOG
Four needle	in	mm	THREAD GUIDE		(COMPLETE)				
CT300U401A	1/4-1/4-1/4	6.4-6.4-6.4	269065-501	269138-503	269191-501	269237-505	269342-501	269379-501	269006-501
CT300U405A	5/16-5/16-5/16	7.9-7.9-7.9	269065	269138-515	269192-507	269237-510	269342-503	269379-510	269006-512
	3/8-3/8-3/8	9.5-9.5-9.5	269065-550	269138-542	269192-513	269237-515	269342-504	269379-517	269006-521
	1/2-1/2-1/2	12.7-12.7-12.7	269065	269138	269193-512	269240-528	269342-505	269379-525	269006-526
	1/4-1-1/4	6.4-25.4-6.4	269065-511	269138-512	269193-506	269240-509	269342-502	269379-509	269006-509

13. OIL PAN COMPLETE & GEAR PULLER COMPONENTS

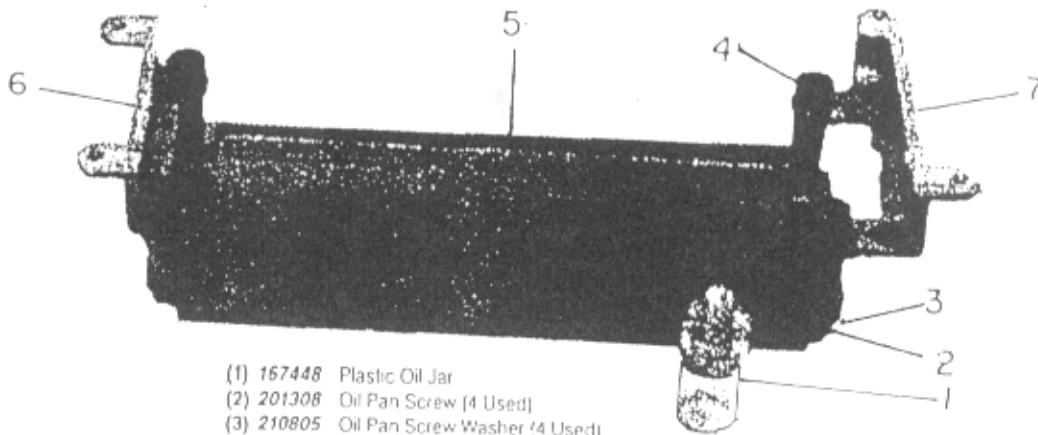


- (1) 167448 Plastic Oil Jar
- (2) 201308 Oil Pan Screw (4 Used)
- (3) 210805 Oil Pan Screw Washer (4 Used)
- (4) 228444 Machine Cushion (Neoprene) (4 Used)
- (5) 228731 Casting Oil Pan
- (6) 228733 Machine Support Bracket (Left)
- (7) 228734 Machine Support Bracket (Right)

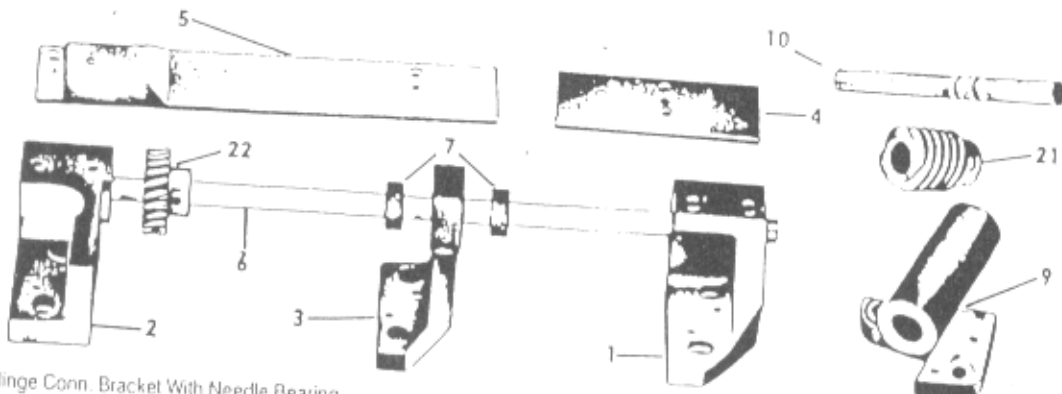

- (1) 268452 Bed Hinge Conn. Bracket With Needle Bearing
- (2) 269609 Bed Hinge Conn. Bracket (Right) With Needle Bearing
- (3) 268449 Puller Feed Roll (Lower) Shaft Bracket With Needle Bearing
- (4) 268407 Puller Feed Cover Plate Left For Gauges $\frac{3}{4}$ to 1 $\frac{1}{2}$ Inches
- (5) 268464 Puller Feed Cover Plate Right For Gauges $\frac{3}{4}$ to 1 $\frac{1}{2}$ Inches
- (6) 268465 Puller Feed Roll (Lower) Shaft
- (7) 268424 Puller Feed Roll (Lower) Shaft Collar With Two 200378 (2 Used)
- (8) 131979 Puller Feed Roll (Rubber, 2 Used, Not Shown) For Gauges $\frac{3}{4}$ to 1 $\frac{1}{2}$ Inches With (2) 140279 Screws
- (9) 269623 Puller Feed Cross Shaft Bracket With Two Needle Bearings
- (10) 269621 Puller Feed Cross Shaft
- (11) 268430 Puller Feed Roll Bar Lifter
- (12) 268432 Puller Feed Roll Bar Lifter Cam Plate
- (13) 268429 Puller Feed Roll Bar Bracket With Bar Lifter Stop Pin
- (14) 268437 Puller Feed Roll (Upper) Bracket For Gauges $\frac{3}{4}$ to 1 $\frac{1}{2}$ Inches
- (15) 268434 Puller Feed Roll (Upper) Bar Position Bracket With 268435 & (2) 200362
- (16) 268428 Puller Feed Roll (Upper) Bar
- (17) 268436 Puller Feed Roll (Upper) Bar Spring
- (18) 268438 Puller Feed Roll (Upper) Shaft For Gauges $\frac{3}{4}$ to 1 $\frac{1}{2}$ Inches
- (19) 913 Puller Roll Tension Adjusting Screw

- 140279 Set Screw For 131979 Puller Feed Roll
- 200017 Screws For 268452, 269609, 269623
- 200050 Bar Lifter Cam Plate Screws (2 Used)
- 200202 Bar Lifter Roller Screw Stud
- 200354 Position Screw For 268437
- 200362 Set Screw For 269625, 269656, 268434
- 200378 Set Screws For 268424 (4 Used)
- 200382 Set Screw For 268437, 269624, 269655
- 200571 Cover Plate Screw For 268407, 268464 (2 Used)
- 201220 Position Screw For 269624, 269656
- 201308 Screw For 268429 (2 Used)
- 232077 Position Pin For 268429 (2 Used)
- 232866 Position Pin For 268452, 269609, 268449, 269623
- 268425 Needle Bearings For Puller Feed Cross Shaft (2 Used)
- 268435 Puller Feed Roll (Upper) Bar Position Bracket Stud
- (22) 269624 Puller Feed Cross Shaft Worm With 200382 and 201220 Set Screws
- (21) 269625 Puller Feed Cross Shaft Worm Gear With Two 200362 Set Screws

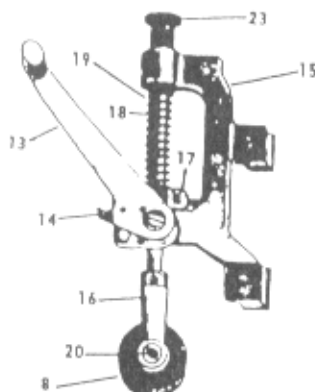

G99
Complete Upper Puller Roll Assembly

STITCHES
PER INCH

- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12

STITCH WORM

- 269653
- 269655
- 269657
- 269659
- 269661
- 269631
- 269663
- 269665
- 269667

GEAR

- 269654
- 269656
- 269658
- 269660
- 269662
- 269632
- 269664
- 269666
- 269668